



▶ User Guide for the  
Polycom® SoundStation® IP 7000  
Phone

---

## Trademark Information

POLYCOM®, the Polycom “Triangles” logo and the names and marks associated with Polycom’s products are trademarks and/or service marks of Polycom, Inc. and are registered and/or common law marks in the United States and various other countries. All other trademarks are property of their respective owners. No portion hereof may be reproduced or transmitted in any form or by any means, for any purpose other than the recipient’s personal use, without the express written permission of Polycom.

## Patent Information

The accompanying product is protected by one or more U.S. and foreign patents and/or pending patent applications held by Polycom, Inc.

## Disclaimer

Some countries, states, or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages for certain products supplied to consumers, or the limitation of liability for personal injury, so the above limitations and exclusions may be limited in their application to you. When the implied warranties are not allowed to be excluded in their entirety, they will be limited to the duration of the applicable written warranty. This warranty gives you specific legal rights which may vary depending on local law.

## Copyright Notice

Portions of the software contained in this product are:

Copyright © 1998, 1999, 2000 Thai Open Source Software Center Ltd. and Clark Cooper

Copyright © 1998 by the Massachusetts Institute of Technology

Copyright © 1998-2003 The OpenSSL Project

Copyright © 1995-1998 Eric Young (eay@cryptsoft.com). All rights reserved

Copyright © 1995-2002 Jean-Loup Gailly and Mark Adler

Copyright © 1996-2004, Daniel Stenberg, <daniel@haxx.se>

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the “Software”), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED “AS IS”, WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

© 2009 Polycom, Inc. All rights reserved.

Polycom, Inc.  
4750 Willow Road  
Pleasanton, CA 94588-2708  
USA

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Polycom, Inc. Under the law, reproducing includes translating into another language or format.

As between the parties, Polycom, Inc., retains title to and ownership of all proprietary rights with respect to the software contained within its products. The software is protected by United States copyright laws and international treaty provision. Therefore, you must treat the software like any other copyrighted material (e.g., a book or sound recording).

Every effort has been made to ensure that the information in this manual is accurate. Polycom, Inc., is not responsible for printing or clerical errors. Information in this document is subject to change without notice.

---

# About This Guide

Thank you for choosing the Polycom® SoundStation® IP 7000 conference phone. This conference phone provides multi-person audio and video conferencing capabilities for medium to large conference rooms within a Session Initiation Protocol (SIP) internet telephony system.

The SoundStation IP 7000 conference phone is a next-generation phone with a modern industrial design, and the latest advancements in Polycom voice technology.

Some of the key features of the phone include:

- Extraordinary audio performance
- Strong IP telephony feature set
- Built-in voice bridge for multi-participant conferences
- Ability to connect two phones together for convenience, performance, and flexibility
- Ability to connect to Polycom HDX™ systems to conduct video calls and conferences
- A port built into the console to allow calls from a computer calling application or a mobile phone

This guide provides everything you need to use your new conference phone. Before you use your phone, read the Parts List and the Safety and Compliance section in this guide before you set up and use the conference phone.

This guide includes regulatory compliance information that your system administrator should review. You can also view this guide at [www.polycom.com/voicedocumentation](http://www.polycom.com/voicedocumentation).

## Changes to this Guide

Major changes have occurred to the following sections since the previous edition:

- Chapter 1, *Getting Started with Your Phone*.

The sections related to setting up the phone have been removed from this guide. For information on setting up your phone, see the *Setup Guide for the Polycom SoundStation IP 7000 Phone*, available at [www.polycom.com/voicedocumentation](http://www.polycom.com/voicedocumentation).

- *Managing Contacts* on page 2-17.

The sections related to Corporate Directory have been updated.

---

# Contents

<b>About This Guide</b> .....	<b>iii</b>
Changes to this Guide .....	iv
<b>1 Getting Started with Your Phone</b> .....	<b>1-1</b>
Features of the Phone .....	1-2
Understanding Icons .....	1-5
Navigating Menus and Entering Data .....	1-7
<b>2 Customizing Your Phone</b> .....	<b>2-1</b>
Configuring Basic Settings .....	2-1
Updating Preferences .....	2-2
Updating the Language .....	2-2
Updating the Time and Date Display .....	2-2
Updating the Display Contrast .....	2-5
Updating the Backlight Intensity .....	2-6
Updating the Ring Tone .....	2-8
Selecting a Different Ring Tone for Your Phone .....	2-9
Setting Distinctive Ring Tones for Contacts .....	2-9
Updating Audio Quality and Capabilities .....	2-11
Updating the Sound Quality of Your Phone .....	2-11
Enabling Auxiliary Audio Components .....	2-12
Adjusting the Speaker and Ringer Volume .....	2-14
Using Call Lists .....	2-14
Viewing Call Lists .....	2-15
Managing Call Lists .....	2-16
Managing Contacts .....	2-17
Viewing Your Local Contact Directory .....	2-18
Accessing Your Corporate Directory .....	2-18
Enabling Your Phone to Save Corporate Directory Search Results .....	2-19

Adding Contacts to Your Local Contact Directory . . . . .	2-20
Adding Contacts Manually . . . . .	2-20
Adding Contacts From Call Lists . . . . .	2-22
Adding Contacts to Your Local Contact Directory From a Corporate Directory . . . . .	2-23
Searching for Contacts . . . . .	2-24
Searching for Contacts in Your Local Contact Directory . . . . .	2-24
Searching for Contacts in Your Corporate Directory . . . . .	2-25
Updating Contacts in Your Local Contact Directory . . . . .	2-27
Deleting Contacts From Your Local Contact Directory . . . . .	2-28
Placing Calls to Contacts . . . . .	2-29
Managing Incoming Calls . . . . .	2-29
Distinguishing Calls . . . . .	2-29
Rejecting Calls . . . . .	2-30
Diverting Calls . . . . .	2-31
Understanding Shared Lines . . . . .	2-32

### **3 Using the Basic Features of Your Phone . . . . . 3-1**

Placing Calls . . . . .	3-2
Placing Calls Using Speed Dial . . . . .	3-5
Answering Calls . . . . .	3-6
Ending Calls . . . . .	3-6
Muting the Microphone . . . . .	3-7
Redialing Numbers . . . . .	3-7
Holding and Resuming Calls . . . . .	3-8
Hosting Conference Calls . . . . .	3-9
Setting Up Conferences . . . . .	3-9
Setting Up a Conference Using the Conference Key or Soft Key . . . . .	3-10
Setting Up a Conference With an Active Call and a Call on Hold . . . . .	3-11
Managing Conferences . . . . .	3-11
Muting Conference Call Participants . . . . .	3-12
Placing Conference Call Participants on Hold . . . . .	3-13
Removing Conference Call Participants . . . . .	3-14
Obtaining Information About Conference Call Participants . . . . .	3-15
Holding and Resuming Conferences . . . . .	3-15
Splitting Conferences . . . . .	3-16
Ending Conferences . . . . .	3-16
Transferring Calls . . . . .	3-17
Performing a Consultative Transfer . . . . .	3-17
Performing a Blind Transfer . . . . .	3-18

Forwarding Calls .....	3-19
Forwarding Calls Statically .....	3-19
Forwarding Calls Dynamically .....	3-21
Enabling Do Not Disturb .....	3-21
Managing Speed Dial Entries .....	3-22
Using Voice Mail .....	3-24

## **4 Using the Advanced Features of Your Phone .....4-1**

Using Computer or Mobile Audio with the Conference Phone .....	4-1
Listening to Computer or Mobile Audio .....	4-2
Ending Computer or Mobile Audio .....	4-5
Placing Computer or Mobile Audio on Hold .....	4-5
Creating Conference Calls with Computer or Mobile Audio .....	4-5
Adjusting the Volume of Computer or Mobile Audio .....	4-6
Using the Phone When it is Connected to a Polycom HDX System ....	4-7
Placing Calls When Your Phone is Connected to a Polycom HDX System .....	4-8
Placing Calls When You Don't Have Any Active Calls .....	4-8
Placing Calls When You Have an Audio-Only Call on Hold .....	4-10
Placing Calls When You Have an Active Audio-only Call or a Video Call .....	4-11
Placing Calls Using Call Lists, Directories, Speed Dial Index Numbers, and the Redial Key When Your Phone is Connected to a Polycom HDX System .....	4-11
Answering Calls When Your Phone is Connected to a Polycom HDX System .....	4-11
Answering Calls When You Don't Have Any Active Calls ...	4-11
Answering Calls When You Have an Audio-Only Call on Hold .....	4-11
Answering Calls When You Have an Active Call .....	4-12
Ending Calls When Your Phone is Connected to a Polycom HDX System .....	4-13
Holding Calls When Your Phone is Connected to a Polycom HDX System .....	4-13
Transferring Calls When Your Phone is Connected to a Polycom HDX System .....	4-13
Forwarding Calls When Your Phone is Connected to a Polycom HDX System .....	4-13
Enabling Do Not Disturb When Your Phone is Connected to a Polycom HDX System .....	4-13
Rejecting Calls When Your Phone is Connected to a Polycom HDX System .....	4-13

Hosting Conference Calls When Your Phone is Connected to a Polycom HDX System .....	4-14
Setting Up Conferences .....	4-14
Handling Active Conferences .....	4-16
Managing Conferences .....	4-16
Controlling Volume and Muting Calls When Your Phone is Connected to a Polycom HDX System .....	4-17
Showing Content When Your Phone is Connected to a Polycom HDX System .....	4-17
Handling Multiple Call Appearances When Your Phone is Connected to a Polycom HDX System .....	4-18
Handling Computer or Mobile Audio When Your Phone is Connected to a Polycom HDX System .....	4-18
Handling Multiple Call Appearances .....	4-18
Using Buddy Lists .....	4-19
Updating Presence Settings .....	4-20
Selecting Contacts to Monitor .....	4-21
Blocking Contacts From Viewing Your Status .....	4-22
Using your Blocked List to Unblock Contacts .....	4-23
Monitoring the Status of Contacts in Your Buddy List .....	4-24
Integrating With Microsoft Office Live Communications Server 2005 .....	4-25
Restarting the Phone .....	4-26

## **5 Troubleshooting Your Phone .....5-1**

Power and Startup .....	5-2
Controls .....	5-3
Access to Screens and Systems .....	5-4
Calling .....	5-5
Displays .....	5-6
Audio .....	5-6
Productivity Suite .....	5-7
Testing Phone Hardware .....	5-7

## **Safety Notices ..... Safety Notices-1**

## **Index .....Index-1**

## **End-User License Agreement for Polycom® Software**



---

# Getting Started with Your Phone

Before you use your phone, you need to become familiar with your phone's features. This chapter describes the phone's features, the icons that display on the phone screen, and how to navigate menus and enter data.

The topics include:

- [Features of the Phone](#) on page 1-2
- [Understanding Icons](#) on page 1-5
- [Navigating Menus and Entering Data](#) on page 1-7

To read about how to change the settings on your phone, see [Chapter 2, Customizing Your Phone](#). To read about the phone's basic features, see [Chapter 3, Using the Basic Features of Your Phone](#). To read about more advanced features, see [Chapter 4, Using the Advanced Features of Your Phone](#).


If you require additional information or assistance with your new phone, see your system administrator.

**Note**

Since you can customize your phone in many different ways, and your system administrator can enable and disable certain features, the user interface that displays on your phone may differ from the figures that appear in this guide.


## Features of the Phone



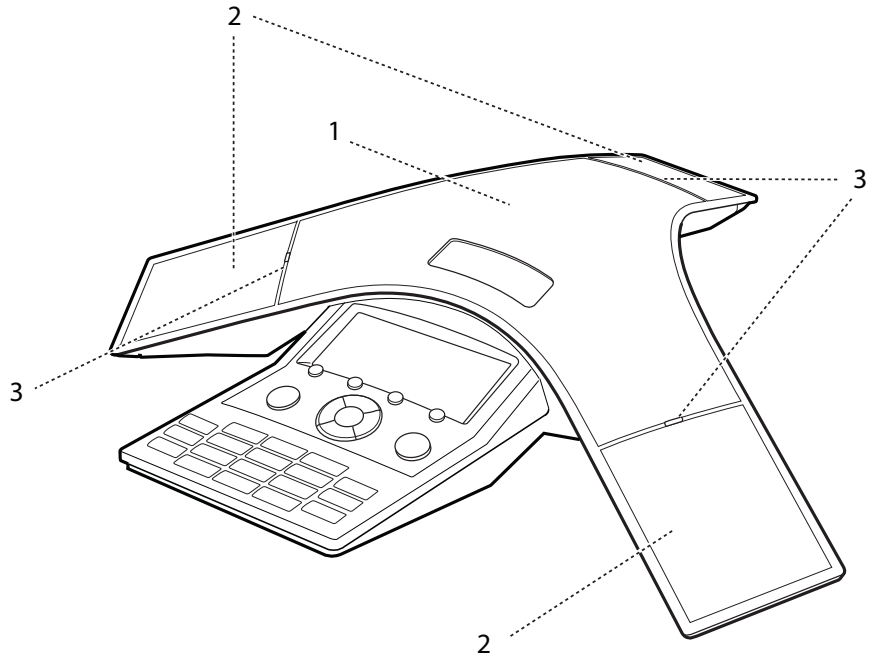



The following figure shows the primary hardware features of your phone console.

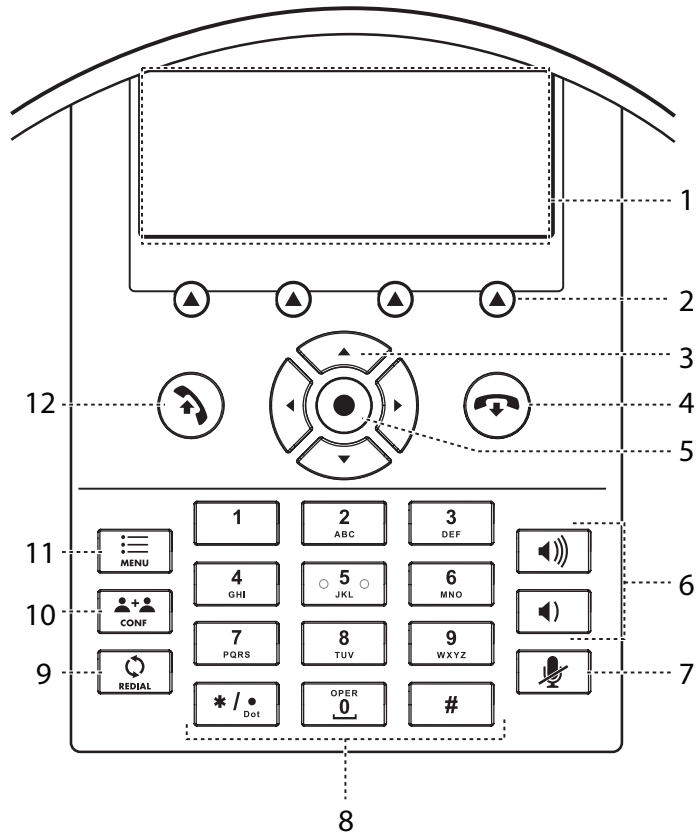






	Feature	Description
1	Speaker	Allows for ringer and hands-free audio output.
2	Microphones	Provide 360° coverage by three internal microphones.
3	LED Indicators	Indicate phone and call status through three bi-color LEDs. The LEDs illuminate to indicate the following normal operational states: <ul style="list-style-type: none"><li>• Solid red—A muted call</li><li>• Flashing red—A call is on hold</li><li>• Solid green—A dial-tone is available, dialing is in-progress, or call is in-progress</li><li>• Flashing green—An incoming call</li></ul>





The following figure shows the primary components on your phone console:




















	Item	Description
1	LCD graphic display	<p>Shows the time and date, menus, and soft keys, as well as information about calls, messages, and features.</p> <p>The information display line (the line that displays the directory number) also displays icons and text, such as:</p> <ul style="list-style-type: none"> <li>• Popup text (like network error messages)</li> <li>• Do Not Disturb text/icon (e.g., "Do Not Disturb")</li> <li>• Call forwarding text/icon (e.g., "Call Forward Enabled")</li> <li>• Missed call text (like "4 new missed calls")</li> <li>• Presence text (like "Busy")</li> <li>• Prompt text (like "Enter URL")</li> <li>• Time and date text</li> </ul> <p>If there are multiple items to display, the items will display in a scrolling fashion.</p>
2	Soft keys 	Select specific context-sensitive functions that display on the screen above each soft key.
3	Scroll keys 	<p>Allow you to:</p> <ul style="list-style-type: none"> <li>• Scroll through displayed information</li> <li>• Enable or disable fields</li> <li>• View the Speed Dial Info list (Up scroll key)</li> <li>• View the Received Calls list (Left scroll key)</li> <li>• View the Placed Calls list (Right scroll key)</li> <li>• View the Missed Calls list (Down scroll key)</li> </ul>
4	End Call key 	Ends a call.
5	Select key 	<p>Allows you to:</p> <ul style="list-style-type: none"> <li>• Select a field of displayed data</li> <li>• Enable or disable fields</li> </ul>
6	Volume keys  	Adjust the volume of the speaker and the ringer.

	Item	Description
7	Mute key 	Stops local audio from being heard at the far end of the call.
8	Dial pad keys	Contain 10 digits, 26 alphabetic characters, and other special characters available in context-sensitive applications.
9	Redial key 	Places a call to the most recently dialed person.
10	Conference key 	Allows you to set up local audio conferences.
11	Menu key 	Allows you to access additional features and configuration settings.
12	Make Call key 	Initiates a call.

## Understanding Icons

Icon	Line, Call State, or Indicator	Description
	Active call using Polycom® HD Voice™ technology	A call is in progress using Polycom HD Voice. The active call icons merge into one icon on the phone screen. The following figure shows what displays on the screen during an active call: 
	Active call not using Polycom HD Voice	A call is in progress that does not use Polycom HD Voice.
	Audio-only call	An audio-only call is either active or on hold, or the phone is placing a call.

Icon	Line, Call State, or Indicator	Description
	Call forward	You have enabled the call forward feature on your phone. See <a href="#">Forwarding Calls</a> on page 3-19.
	Conference	A conference is in progress. See <a href="#">Hosting Conference Calls</a> on page 3-9.
	Dialing	The phone is placing a call.
	Hold	A call or conference is on hold. See <a href="#">Holding and Resuming Calls</a> on page 3-8 and <a href="#">Holding and Resuming Conferences</a> on page 3-15.
	Do Not Disturb	You have enabled the Do Not Disturb feature on your phone. Your phone will not ring. See <a href="#">Enabling Do Not Disturb</a> on page 3-21.
	Far mute	You have applied the far mute feature to a conference call participant. The muted participant can hear all participants, but no participant can hear the muted participant. See <a href="#">Muting Conference Call Participants</a> on page 3-12.
	Presence	Identifies the status of a buddy in your Buddy Status list. See <a href="#">Using Buddy Lists</a> on page 4-19.  — Online  — Busy or On the phone  — Be right back, Away, or Out to lunch  — Offline
	Registered line	The phone can place and receive calls.
	Registered shared line	The phone, which shares a directory number with another phone, can place and receive calls. See <a href="#">Understanding Shared Lines</a> on page 2-32.
	Ringing	The phone is ringing.





Icon	Line, Call State, or Indicator	Description
	Unregistered line	The phone is unable to place and receive calls.
	Video call	A video call is taking place, or the phone is placing a video call.
	Voice mail message	You have a new voice mail message. See <a href="#">Using Voice Mail</a> on page 3-24.








## Navigating Menus and Entering Data

To navigate menus and enter data, use the following tips.

### Note



After 20 seconds of inactivity, the menu system automatically exits to the idle screen unless an edit session is in progress.

If you want to ...	Then do this ...
Enter the Main Menu	Press  .
Exit the Main Menu and return to the idle screen	Press  .
Exit the Main Menu or Directories menu	Press the <b>Exit</b> soft key.
Return to the previous menu	Press the <b>Back</b> soft key.
Cancels the current task or edit session	Press the <b>Cancel</b> soft key.
Scroll through a list or menu items	Press the <b>Up</b> and <b>Down</b> scroll keys:  and  . When lists appear on more than one page, press the * key to Page Up, or press the # key to Page Down.

If you want to ...	Then do this ...
Select a menu item	<p>Do one of the following:</p> <ul style="list-style-type: none"> <li>• Scroll to the menu item, and then press .</li> <li>• Scroll to the menu item, and then press the <b>Select</b> soft key.</li> <li>• Press the dial pad key that corresponds to the item in the numbered menu list. For example, to select the second item in a menu, press <b>2</b>.</li> </ul>
Enter text	<p>In text-entry mode, press the number keys one or more times.</p> <p>For example, to enter “A,” press .</p> <p>once. To enter “C,” press  three times quickly.</p> <p>(To enter and dial an IP address or URL, see <a href="#">Placing Calls</a> on page 3-2.)</p>
Enter numbers, uppercase characters, or lowercase characters	<p>Press the <b>1/A/a</b> soft key one or more times. The format the text will display in appears at the top of the screen.</p>
Enter text in a specific language	<p>Press the <b>Encoding</b> soft key. The language the text will display in appears at the top of the screen.</p>
Enter special characters	<ul style="list-style-type: none"> <li>• In text-entry mode, press the <b>1/A/a</b> soft key to select A/Ascii or a/Ascii mode, and then press  or  one or more times.</li> </ul> <p>or</p> <ul style="list-style-type: none"> <li>• To enter other special characters, press  one or more times.</li> </ul>
Enter a space	<p>In text-entry mode, press the <b>1/A/a</b> soft key to select A/Ascii or a/Ascii mode, and then press  three times quickly.</p>



---

If you want to ...	Then do this ...
Delete text you entered	Press the << soft key.
View additional soft keys	Press the <b>More</b> soft key.
Enable or disable fields	Press the <b>Right</b> or <b>Left</b> scroll key:  and  .



---

# Customizing Your Phone

You can customize your SoundStation IP 7000 conference phone by adjusting certain settings, including time and date, language, display contrast and intensity, and ring tone. You can also add contacts to your phone's local Contact Directory.

This chapter shows you how to customize your phone. It includes the following topics:


- [Configuring Basic Settings](#) on page 2-1
- [Adjusting the Speaker and Ringer Volume](#) on page 2-14
- [Using Call Lists](#) on page 2-14
- [Managing Contacts](#) on page 2-17
- [Managing Incoming Calls](#) on page 2-29

Some customizations, including setting up shared lines and viewing a Corporate Directory, must be configured by your system administrator.

To learn about the phone's basic features, see Chapter 3, [Using the Basic Features of Your Phone](#). To read about the phone's advanced features, see Chapter 4, [Using the Advanced Features of Your Phone](#).

For more information or assistance with your new phone, see your system administrator.

## Configuring Basic Settings

To configure basic phone settings, press , and then select **Settings > Basic** to view the basic phone settings you can customize.

This section includes the following topics:

- [Updating Preferences](#)
- [Updating the Display Contrast](#)
- [Updating the Backlight Intensity](#)
- [Updating the Ring Tone](#)
- [Updating Audio Quality and Capabilities](#)

## Updating Preferences


The Preferences menu allows you to customize the language that displays on the phone and how the time and date display on the idle screen.

You can also enable your phone to save Corporate Directory search results (if Corporate Directory is set up on your phone). See [Enabling Your Phone to Save Corporate Directory Search Results](#) on page 2-19.

### Updating the Language

The phone supports many languages. English (Internal) is the default language that displays.

#### To change the language:


1. Press , and then select **Settings > Basic > Preferences > Language**.

The Language screen displays.



2. Scroll to the language you want, and then press **Select**.

The text that appears on the screen will change to the language that you selected.


3. Press  to return to the idle screen.

### Updating the Time and Date Display


The time and date display on the idle screen of your phone. If the phone cannot obtain a time and date, the display will flash. If this happens, or if the time or date is incorrect, see your system administrator.

You can select from various formats for the time and date display. Select and set options that are right for you. You can also disable the time and date display, so the time and date do not display on the phone screen.


The following figure shows the default format for the date and time display.

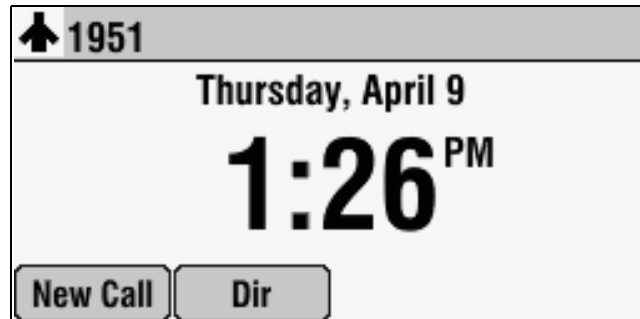


To display a new time format:

1. Press , and then select **Settings > Basic > Preferences > Time & Date > Clock Time**.

The Clock Time screen displays.

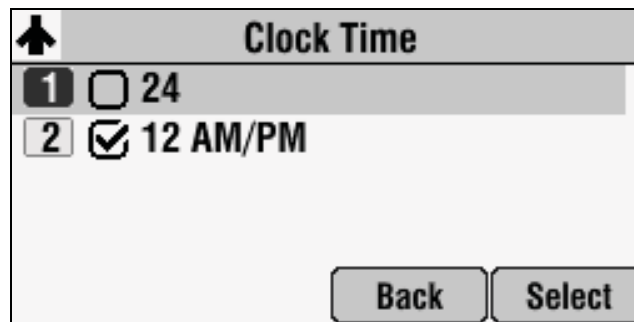



2. Scroll to the time format you want, and then press **Select**.
3. Press  to return to the idle screen.

**To display a new date format:**

1. Press , and then select **Settings > Basic > Preferences > Time & Date > Clock Date**.

The Clock Date screen displays.

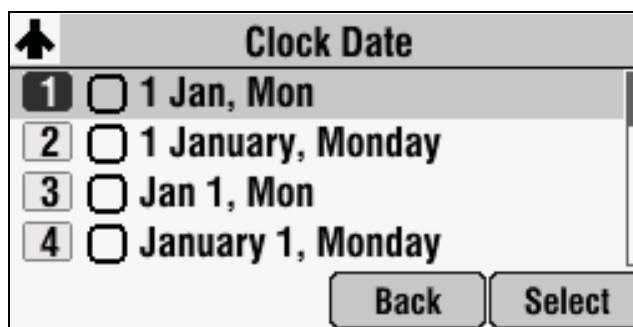


2. Scroll to the date format you want, and then press **Select**.
3. Press  to return to the idle screen.

**To disable the time and date display:**

1. Press , and then select **Settings > Basic > Preferences > Time & Date**.

The Time & Date screen displays.




2. Scroll to **Disable**, and then press **Select**.
3. Press  to return to the idle screen.


The idle screen no longer displays the time and date. To display the time and date again, enable the time and date (see below).

**To enable the time and date display:**

1. Press , and then select **Settings > Basic > Preferences > Time & Date**.

The Time & Date screen displays.

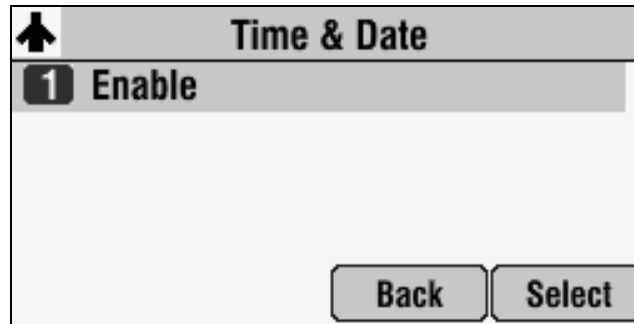

2. Press **Select**.
3. Press  to return to the idle screen.


The idle screen now displays the time and date.


## Updating the Display Contrast

**To adjust the contrast on the phone display:**

1. Press , and then select **Settings > Basic > Contrast**.

The Contrast screen displays.

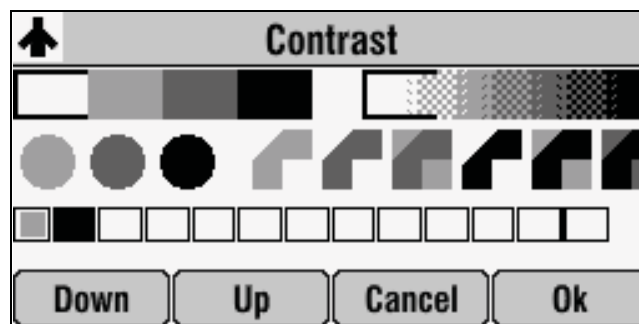

2. Press the **Up** or **Down** soft keys to increase or decrease the display contrast.
3. Press the **Ok** soft key.
4. Press  to return to the idle screen.

## Updating the Backlight Intensity

Backlight intensity on the phone has three components:

- Backlight On
- Backlight Idle
- Maximum Intensity

You can modify the Backlight On intensity and the Backlight Idle intensity separately. You can select high, medium, low, and off levels for both.

When you modify the Maximum Intensity, you modify the entire backlight intensity scale. For example, if you decrease the Maximum Intensity, the low, medium, and high levels for both Backlight On and Backlight Idle intensities decrease.

The Backlight On intensity applies to following events:

- Any key press
- Incoming calls
- Ending a call, holding a call, or resuming a call by the other person
- A voice message received

If you do not press any keys on the phone, after 20 seconds of the backlight turning on, the backlight dims (or changes) to medium in the following cases:

- A call is in progress
- A call is on hold
- There is an incoming call (ringing)
- There is an outgoing call (ringing back)
- Any menu shows on the display

In all other cases, the Backlight Idle intensity applies.



**To update the backlight intensity:**

1. Press , and then select **Settings > Basic > Backlight Intensity**.

The Backlight Intensity screen displays.



2. Select **Backlight On Intensity**.

The Backlight On Intensity screen displays.




3. Scroll to the intensity you want, and then press **Select**. The default Backlight On Intensity is High.
4. Press the **Save** soft key.
5. Select **Backlight Idle Intensity**.


The Backlight Idle Intensity screen displays.



6. Scroll to the intensity you want, and then press **Select**. The default Backlight Idle Intensity is Low.
7. Press the **Save** soft key.
8. Select **Maximum Intensity**.

The Maximum Intensity screen displays.

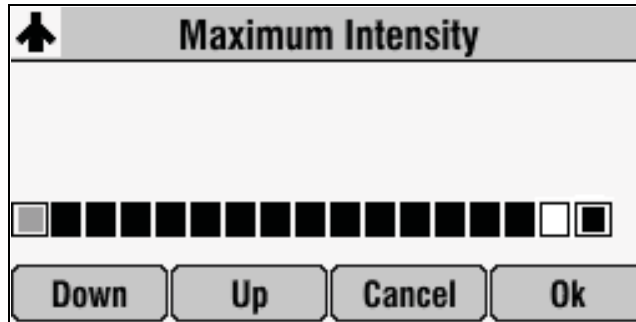

9. Press the **Up** or **Down** soft keys to increase or decrease the maximum intensity the screen can display, and then press the **Ok** soft key.
10. Press  to return to the idle screen.

## Updating the Ring Tone

You can select from many different ring tones to distinguish your phone from your neighbor's. You can also set distinctive ring tones for contacts in your local directory so you can identify callers when your phone rings.

### Selecting a Different Ring Tone for Your Phone


You can choose a unique ring tone for your phone to identify it when it rings.

#### To select a ring tone for your phone:

1. Press , and then select **Settings > Basic > Ring Type**.

The Ring Type screen displays.



2. Scroll to the ring type you want. To hear the ring type, press the **Play** soft key. The default ring type is Low Trill.
3. Press **Select**.
4. Press  to return to the idle screen.

### Setting Distinctive Ring Tones for Contacts

#### Note


Your company's settings may override this feature. For more information, contact your system administrator.

You can set a distinctive ring tone for each contact in your contact directory so you can distinguish callers.

**To set a distinctive ring tone for a contact:**


1. Press , and then select **Features > Contact Directory**.

The Directory screen displays.

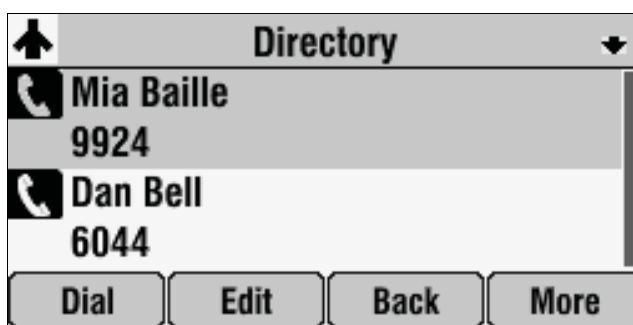

2. Scroll to the contact for whom you want to assign a distinctive ring tone.
3. Press the **Edit** soft key.

The Edit Contact screen displays.

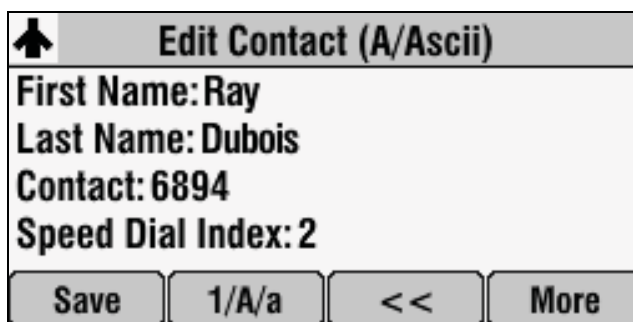


4. Scroll to **Ring Type**, and then enter a number corresponding to one of the ring types available.

If a ring type is already assigned to the contact, but you want to change it, press the << soft key to delete the existing ring type. Then, enter a number corresponding to one of the ring types available.

**Note**

To exit this screen and determine the number associated with a ring type, press the **Menu** key, and then select **Settings > Basic > Ring Type**. Each ring type has a number associated with it.

5. Press the **Save** soft key.
6. Press  to return to the idle screen.


## Updating Audio Quality and Capabilities

You can adjust the audio quality of your phone, and enable auxiliary audio components, such as wireless (lapel) microphones, speakers, recording devices, and computers that you connect to the Multi-Interface Module.


### Updating the Sound Quality of Your Phone

You can adjust the sound quality of your phone by changing the treble or bass control.


#### To adjust the sound quality of your phone:

1. Press , and then select **Settings > Basic > Audio > Bass and Treble**.

The Bass and Treble screen displays.

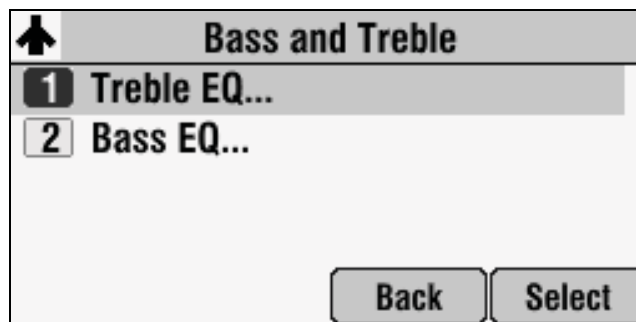


2. Do one of the following:
  - To adjust the treble control, scroll to **Treble EQ**, and then press **Select**.  
The Treble EQ screen displays.

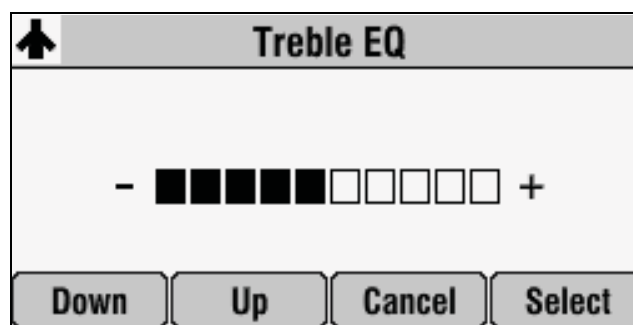


or

- To adjust the bass control, scroll to **Bass EQ**, and then press **Select**.

The Bass EQ screen displays.

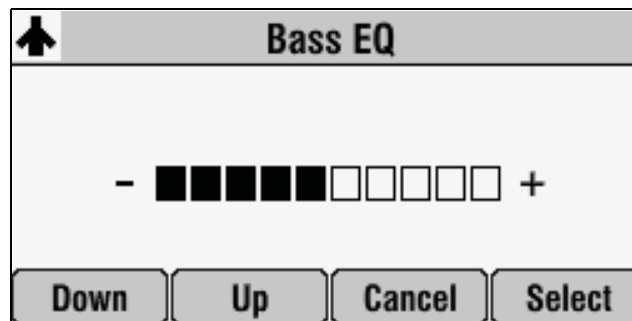

3. Press the **Up** or **Down** soft keys to adjust the treble or bass EQ, and then press **Select**.
4. Press  to return to the idle screen.

### Enabling Auxiliary Audio Components


Before you can use the auxiliary audio components that you connect to the Multi-Interface Module (wireless microphones, speakers, as well as recording devices and computers to record phone calls), you must enable them. You enable the components from the Auxiliary Audio menu.

#### Note


You do not have to enable audio from a mobile phone or from a computer calling application. This audio is automatically enabled when you connect the Mobile Phone Cable or the Computer Calling Cable to the 2.5mm audio connector on your conference phone.


For information on connecting auxiliary audio components to the conference phone or Multi-Interface Module, see the *Setup Guide for the Polycom SoundStation IP 7000 Phone*, available at [www.polycom.com/voicedocumentation](http://www.polycom.com/voicedocumentation).

**To enable or disable wireless (lapel) microphones:**


1. Press , and then select **Settings > Basic > Audio > Auxiliary Audio > Aux Audio In**.

The Aux Audio In screen displays.

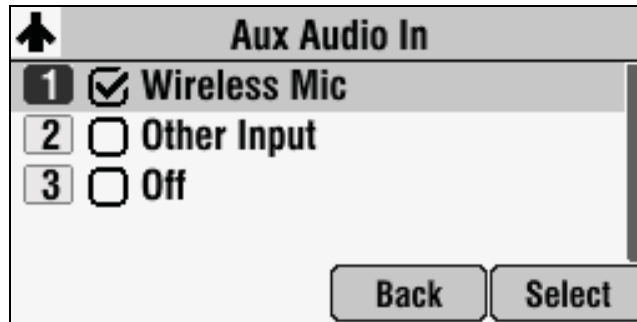



2. Do one of the following:
  - To enable a wireless (lapel) microphone, scroll to **Wireless Mic**, and then press **Select**.
  - To disable wireless microphones, scroll to **Off**, and then press **Select**.
3. Press  to return to the idle screen.

**To enable or disable speakers, as well as recording devices and computers:**

1. Press , and then select **Settings > Basic > Audio > Auxiliary Audio > Aux Audio Out**.

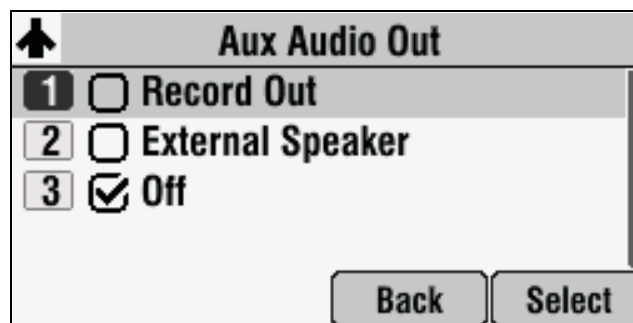

The Aux Audio Out screen displays.





2. Do one of the following:
  - To enable recording devices or computers to record phone calls, scroll to **Record Out**, and then press **Select**.
  - To enable external speakers, scroll to **External Speaker**, and then press **Select**.
  - To disable speakers, and to prevent recording devices and computers from recording phone calls, scroll to **Off**, and then press **Select**.
3. Press  to return to the idle screen.

## Adjusting the Speaker and Ringer Volume

### To adjust the speaker volume:

>> During a call, press either  or  to adjust the speaker volume.

### To adjust the ringer volume:

>> When the phone is in the idle state, press either  or  to adjust the ringer volume.


## Using Call Lists

Your phone maintains lists of missed, received, and placed calls. Each list can hold up to 100 entries.

If you miss a call (for example, if you do not answer a call, or you have call forwarding or Do Not Disturb enabled), the idle screen will display a message indicating the number of missed calls you have. To view information about the missed call, view your Missed Calls list (see [Viewing Call Lists](#), below). After you view the Missed Calls list, the message on the idle screen is removed.



The following figure shows the idle screen when you miss a call.

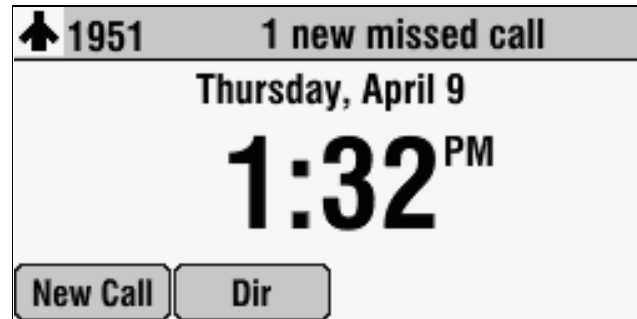


## Viewing Call Lists

You can access missed, received, and placed calls from the idle screen, or you can quickly access call lists using the scroll keys.

### To view a call list:

>> From the idle screen, do one of the following:

- Press , and then select **Features > Call Lists > Missed Calls, Received Calls, or Placed Calls.**

or

- Press the **Dir** soft key, and then select **Call Lists > Missed Calls, Received Calls, or Placed Calls.**

or

- Use the scroll keys to access a call list:
  - To view the Received Calls List, press the **Left** scroll key.
  - To view the Placed Calls List, press the **Right** scroll key.
  - To view the Missed Calls List, press the **Down** scroll key.

## Managing Call Lists

You can clear all the records in a call list, or just one record. You can also choose a record in a list and return the call, store the call details in your local Contact Directory, or view detailed information about the particular call.

### To manage a call list:

1. Press the **Dir** soft key, and then select **Call Lists**.


The Call Lists screen displays.



2. Do one of the following:

- To clear the records in a call list, select **Clear > Missed Calls, Received Calls, or Placed Calls**.

The following figure shows the message that displays when you clear a Missed Calls list.

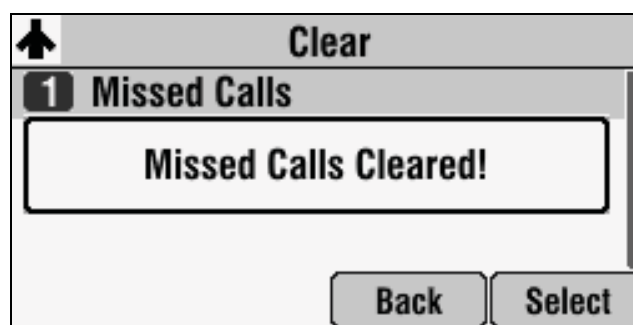


### Note

To manually clear all calls in all call lists, restart the phone. See [Restarting the Phone](#) on page 4-26.


- To view and manage a call list, scroll to either **Missed Calls, Received Calls** or **Placed Calls**, and then press **Select**. Your call list information displays.

The following figure shows a Placed Calls list.

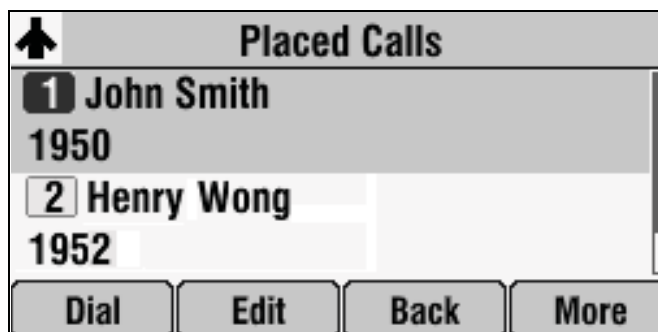

To manage your call list:

- To return the call, press the **Dial** soft key.
- To edit the phone number (if necessary) before you place the call or store the call details in your Contact Directory, press the **Edit** soft key.
- To return to the Call Lists menu, press the **Back** soft key.
- To remove the call from the list, press the **Clear** soft key.
- To store the contact in your Contact Directory, press the **Save** soft key.
- To view information about the call, such as the phone number, the time and duration of the call, and the name of the caller, press the **Info** soft key.

3. Press  twice to return to the idle screen.

## Managing Contacts

You can store a large number of contacts in your phone's local Contact Directory. Contact your system administrator for the exact number.

You can dial and search for contacts in this directory. You may be able to add, edit, and delete contacts. Contact your system administrator to see if you have read-only access to your local Contact Directory, or if you can update it.

If your system administrator sets up a Corporate Directory on your phone, you may also have read access to portions of your Corporate Directory. Your system administrator determines which contacts you can see. You can search for contacts in the Corporate Directory, and add contacts from the Corporate Directory to your local Contact Directory. For more information, see [Searching for Contacts in Your Corporate Directory](#) on page 2-25 and [Adding Contacts to Your Local Contact Directory From a Corporate Directory](#) on page 2-23.

### Note

You cannot update the contacts in your Corporate Directory. You can only search for and dial contacts, and add contacts from your Corporate Directory to your local Contact Directory.

## Viewing Your Local Contact Directory

### To view your local Contact Directory:


>> Do one of the following:

- Press , and then select **Features > Contact Directory**.

or

- Press the **Dir** soft key, and then select **Contact Directory**.

The Directory screen displays, listing all the contacts in your directory.

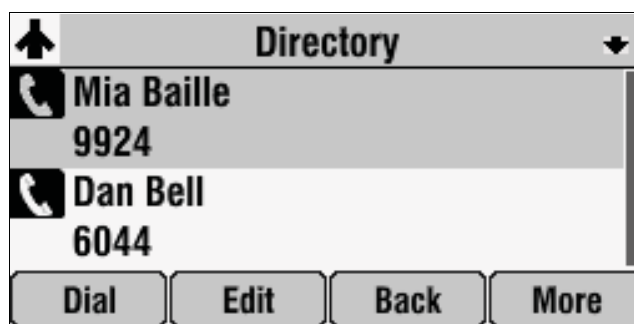

## Accessing Your Corporate Directory

When you access Corporate Directory, a search screen displays so you can search for a specific contact. You can perform a quick search or an advanced search.

### Note

Each time you access Corporate Directory, the search screen displays, unless you enable your phone to remember the last search you performed or the last person you selected. To enable this feature, see [Enabling Your Phone to Save Corporate Directory Search Results](#) on page 2-19.

### To access your Corporate Directory:

1. Do one of the following:

- Press , and then select **Features > Corporate Directory**.


or

- Press the **Dir** soft key, and then select **Corporate Directory**.

The Corporate Directory search screen displays.

**Note**

If you have enabled your phone to save the results of your last search (or remember the last contact you selected), your previous search results (or the contact), will display instead of a blank search screen. To enable this feature, see [Enabling Your Phone to Save Corporate Directory Search Results](#) on page 2-19.

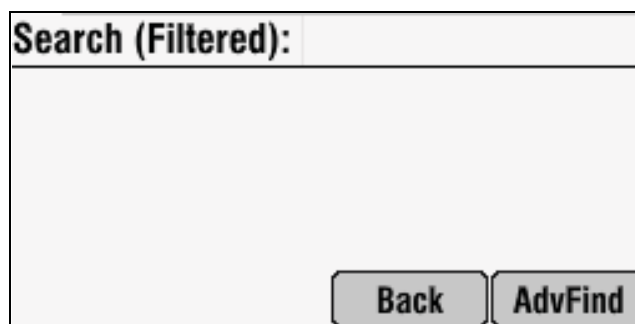



2. Search for the contact. (See [Searching for Contacts in Your Corporate Directory](#) on page 2-25.)

### Enabling Your Phone to Save Corporate Directory Search Results

You can enable your phone to save Corporate Directory search results, and to remember the last person you viewed in the directory. Whenever you re-display Corporate Directory, the results of your last search, or the last person you selected, will display. If you don't enable your phone to save search results, each time you access Corporate Directory, a blank search screen will display.

#### To enable your phone to save Corporate Directory search results:

1. Press , and then select **Settings > Basic > Preferences > Corporate Directory > View Persistency**.
2. Select **Enabled**, and then press the **Select** soft key.
3. To save the update, press the **Back** soft key.
4. Press  to return to the idle screen.

## Adding Contacts to Your Local Contact Directory

You can add contacts to your local Contact Directory in the following ways:

- Manually (if you have permission to update your local Contact Directory)
- From a call list
- From a Corporate Directory (if this is set up on your phone)

### Note

You cannot update Corporate Directory from your phone.


### Adding Contacts Manually

You can update your local Contact Directory manually, instead of importing contact information from a call list or a Corporate Directory.

#### To add a contact manually:


1. Press the **Dir** soft key, and then select **Contact Directory**.

The Directory screen displays.

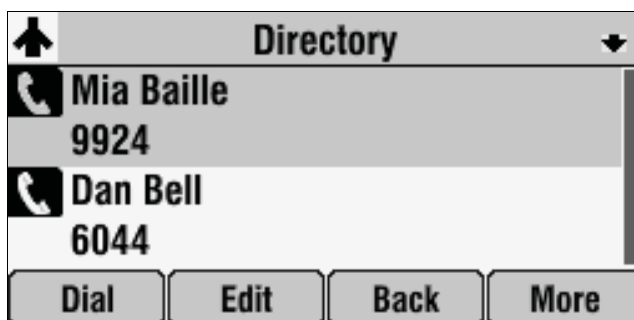

2. To add a contact to your phone's database, press the **Add** soft key.

The Add To Directory screen displays.

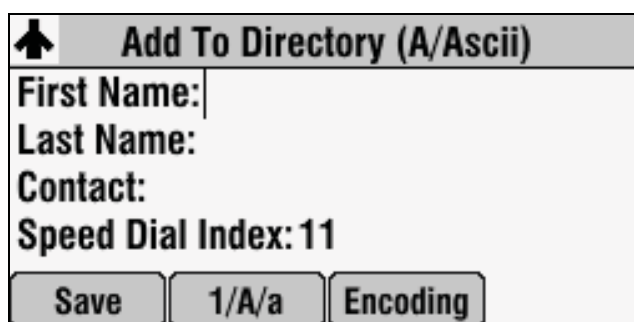

3. Enter the contact information. To move between fields, use the **Up** and **Down** scroll keys. Enter the following information:

**Note**

Your phone may not display all the following fields. For more information, see your system administrator.

- (Optional.) Enter the First Name and Last Name of the contact.  
You can enter a maximum of 32 characters. To alternate between numeric, uppercase, and lowercase alphanumeric modes, press the **1/A/a** soft key. To enter text in another language, press the **Encoding** soft key.
- (Required.) Enter the Contact phone number.  
You can enter a maximum of 32 characters. The contact number must be unique, and must not already exist in the directory. If you try to save an entry with a non-unique phone number, or you do not enter a phone number, an error message displays.
- (Optional.) Change the Speed Dial Index number.  
The speed dial index is automatically assigned to the next available index value, up to a maximum value of 99.  
You can assign any unused speed dial index number from 1 to 99. If you assign a speed dial index number that is already taken, or you enter an invalid speed dial index number (for example, 0 or 00), an error message displays.  
For more information on speed dial index numbers, see [Managing Speed Dial Entries](#) on page 3-22.
- (Optional.) Enter a Label for the contact. You can enter a maximum of 32 symbols, letters, or numbers.  
If you specify a label, the label will be the first item that displays for the contact in the Contact Directory and on the Speed Dial Info screen (before the contact's first and last names, if specified). For example, in the following figure, the labels Sales and Marketing have been assigned to contacts in the local Contact Directory.



- (Optional.) Set the Ring Type.

For information on setting the ring type, see [Updating the Ring Tone](#) on page 2-8.

- (Optional.) Assign a Divert Contact.

The Divert Contact identifies the third person to which you want this contact's calls sent. You can enter a maximum of 32 characters.

- (Optional.) Change the Auto Reject and Auto Divert settings.

If you set the Auto Reject field to enabled, each time the contact calls, the call will be directed to your voice mail system (if a voice mail system is set up). If you set the Auto Divert field to enabled, each time the contact calls, the call will be directed to a third person you specify in the Divert Contact field.

Press the **Right** or **Left** scroll key to switch between the Enabled and Disabled settings for the Auto Reject and Auto Divert fields.

#### Note


If you do not have a voice mail system set up, enabling the Auto Reject field will have no effect. Each time the contact calls, your phone will ring (unless you choose to divert the contact's calls, or enable call forwarding or Do Not Disturb).

- (Optional.) Change the Watch Buddy and Block Buddy settings.

If you set the Watch Buddy field to enabled, you can monitor the contact's status. If you set the Block Buddy field to enabled, the contact cannot monitor your status. For more information on monitoring status, see [Using Buddy Lists](#) on page 4-19.

Press the **Right** or **Left** scroll key to switch between the Enabled and Disabled settings for the Watch Buddy and Block Buddy fields.


4. Press the **Save** soft key.

5. Press  twice to return to the idle screen.

### Adding Contacts From Call Lists

You can save call information from a call list to your local Contact Directory.

#### To add a contact to the local Contact Directory from a call list:

1. Press the **Dir** soft key, and then select **Call Lists > Missed Calls, Received Calls, or Placed Calls**.
2. Scroll to the contact.  
You can use the \* key to Page Up and the # key to Page Down.
3. To save the contact to your Contact Directory, press the **Save** soft key.
4. Press  twice to return to the idle screen.



**Note**

You may want to go to the Contact Directory and check if the contact was saved correctly and to add any missing fields. To view your Contact Directory, see [Managing Contacts](#) on page 2-17. To update missing contact information, see [Adding Contacts Manually](#) on page 2-20 (step 3).

**Adding Contacts to Your Local Contact Directory From a Corporate Directory**

You can save any contact listed in your Corporate Directory (if it is set up on your phone) to your local Contact Directory.


**To add a contact to your local Contact Directory from a Corporate Directory:**

1. Press the **Dir** soft key, and then select **Corporate Directory**.

The Corporate Directory search screen displays.

**Note**

If you have enabled your phone to save the results of your last search (or remember the last contact you selected), your previous search results (or the contact), will display instead of a blank search screen. To enable this feature, see [Enabling Your Phone to Save Corporate Directory Search Results](#) on page 2-19.

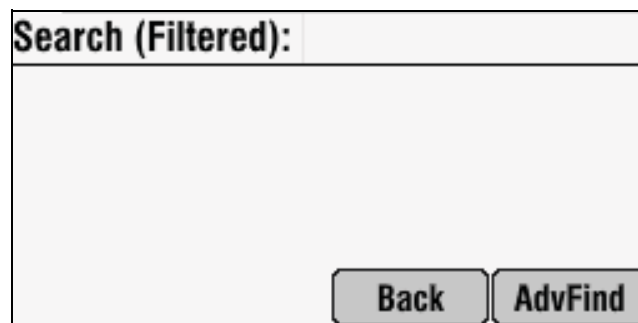


2. Search for the contact, and then scroll to the contact's entry.

For information on how to search for a contact, see [Searching for Contacts in Your Corporate Directory](#) on page 2-25.

3. Press the **View** soft key.

The Contact screen displays.



4. To save the contact to the local Contact Directory, press the **Save** soft key. "Saved" displays on the screen. Only the first name, last name, and phone number are saved.  
If the contact already exists in your local Contact Directory, "Contact already exists" displays.
5. Press  twice to return to the idle screen.

**Note**

You may want to go to the Contact Directory and check if the contact was saved correctly and to add any missing fields. To view your Contact Directory, see [Managing Contacts](#) on page 2-17. To update missing contact information, see [Adding Contacts Manually](#) on page 2-20 (step 3).

## Searching for Contacts

You can search for contacts in your local Contact Directory, or in a Corporate Directory (if this is set up on your phone).


### Searching for Contacts in Your Local Contact Directory

Search for a contact by scrolling through the directory, or entering specific search criteria.

**To search for a contact in the local Contact Directory:**


1. Press the **Dir** soft key, and then select **Contact Directory**.

The Directory screen displays.

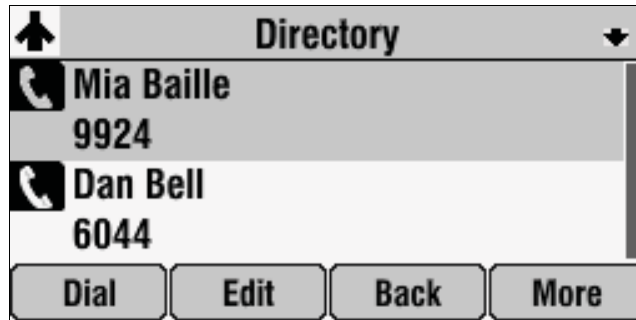


2. Press the **Search** soft key. Then, enter the first few characters of the contact's first or last name, and then press the **Search** soft key again.

The Directory Search screen displays a list of successful matches.

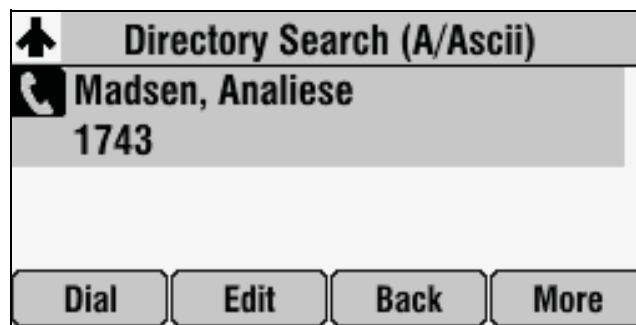

3. Scroll to the contact you are searching for.

From this screen, you can dial, edit, or delete the contact.

4. Press  twice to return to the idle screen.

**Searching for Contacts in Your Corporate Directory**

Search for a contact by entering specific search criteria.

**Note**

You can enable your phone to save Corporate Directory search results, and to remember the last person you viewed in the directory. Whenever you re-display Corporate Directory, the last search you performed will display, or the last person you selected will display. To enable this feature, see [Enabling Your Phone to Save Corporate Directory Search Results](#) on page 2-19.

**To search for a contact in the Corporate Directory:**

1. Press the **Dir** soft key, and then select **Corporate Directory**.

The Corporate Directory search screen displays.

**Note**

If you have enabled your phone to save the results of your last search (or remember the last contact you selected), your previous search results (or the contact), will display instead of a blank search screen. To enable this feature, see [Enabling Your Phone to Save Corporate Directory Search Results](#) on page 2-19.



2. Perform a quick search or an advanced search.

A quick search allows you to search using the contact's last name (if the directory is alphabetized by last name) or first name (if the directory is alphabetized by first name). An advanced search uses any combination of the contact's first and last names, phone numbers, address, and title.

Do one of the following:

- To perform a quick search, next to "**Search (Filtered),**" enter the first few characters of the contact's first or last name (depending on how the directory is organized), and then press the **Submit** soft key. The screen displays a list of contacts, starting with any successful matches.

or


- To perform an advanced search, press the **AdvFind** soft key.

The Advanced Find screen displays.

Enter your search criteria, and then press the **Submit** soft key. The screen displays any successful matches.

**Note**

If you want to erase all your search criteria and enter new criteria before you submit your search, press the **Clear** soft key.

3. Press  twice to return to the idle screen.

## Updating Contacts in Your Local Contact Directory

You can update information for contacts in your local Contact Directory. You cannot update information for contacts in your Corporate Directory.


**To update a contact in your local Contact Directory:**


1. Press the **Dir** soft key, and then select **Contact Directory**.

The Directory screen displays.

2. Scroll to the contact whose information you want to update, or search for the contact (see [Searching for Contacts in Your Local Contact Directory](#) on page 2-24).

3. Press the **Edit** soft key.  
The Edit Contact screen displays.

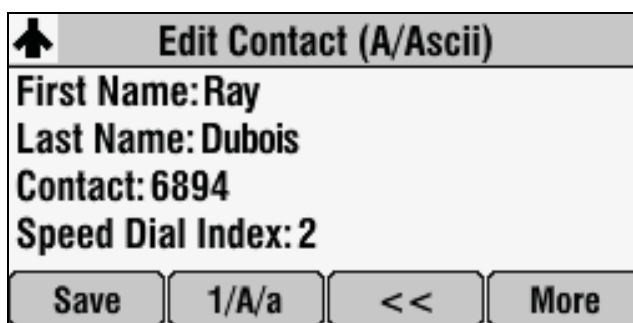


4. Update the contact information. For information on the fields you can update, see [Adding Contacts Manually](#) on page 2-20 (step 3).
5. Press the **Save** soft key.
6. Press  twice to return to the idle screen.

## Deleting Contacts From Your Local Contact Directory


You can delete contacts from your local Contact Directory. You cannot delete contacts from your Corporate Directory.

### To delete a contact from the local Contact Directory:

1. Press the **Dir** soft key, and then select **Contact Directory**.  
The Directory screen displays.

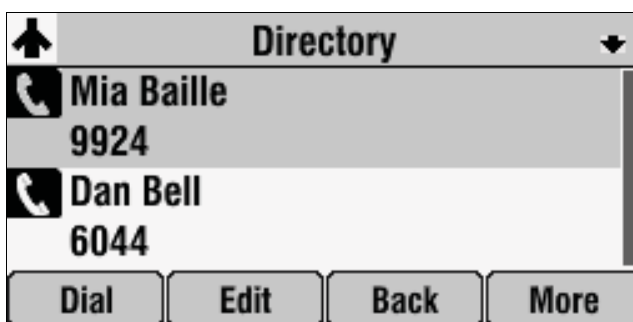

2. Scroll to the contact you want to delete. Or, search for the contact (see [Searching for Contacts in Your Local Contact Directory](#) on page 2-24).

3. Press the **Delete** soft key.  
The contact is deleted from the directory.
4. Press  twice to return to the idle screen.

## Placing Calls to Contacts

You can place calls to contacts from your local Contact Directory or from your Corporate Directory (if this is set up on your phone).

### To place a call to a contact from your Local or Corporate Directory:

1. Press the **Dir** soft key, and then select **Contact Directory** or **Corporate Directory**.
2. From the Directory or Corporate Directory screen, scroll to the contact you want to call, or search for the contact (see [Searching for Contacts](#) on page 2-24).
3. Press the **Dial** soft key.

## Managing Incoming Calls

You can manage incoming calls from the contacts in your local Contact Directory by doing the following:

- Setting up a distinctive ring tone for a contact
- Rejecting calls from a particular contact by sending the call to your voice mail system
- Diverting calls from a particular contact to another person

## Distinguishing Calls

You can customize your phone so that you can distinguish callers by certain ring types. For information on setting a distinctive ring type for a particular contact, see [Setting Distinctive Ring Tones for Contacts](#) on page 2-9.

## Rejecting Calls

You can customize your phone so that incoming calls from a particular person are immediately sent to your voice mail system. (If you do not have a voice mail system set up, the call will still ring on your phone.)


### Note

Rejecting calls is not available on shared lines.

### To send incoming calls from a particular contact directly to voice mail:


1. Press the **Dir** soft key, and then select **Contact Directory**.


The Directory screen displays.

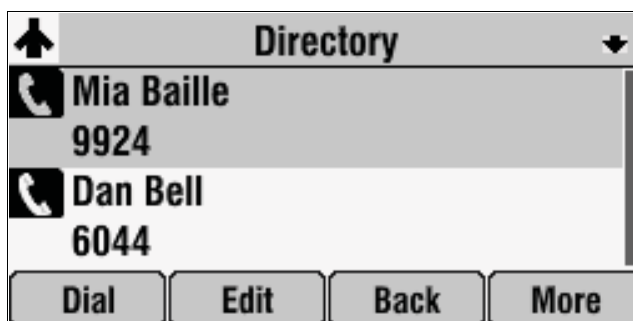

2. Scroll to the contact whose calls you want to go to your voice mail system. You can use the \* key to Page Up and the # key to Page Down.
3. Press the **Edit** soft key.

The Edit Contact screen displays.

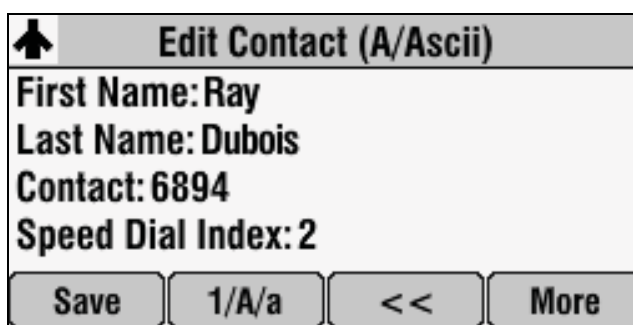

4. Scroll to the **Auto Reject** field and change the Auto Reject setting to **Enabled**. (To select Enabled, press the **Right** or **Left** scroll key.)
5. Press the **Save** soft key.
6. Press  twice to return to the idle screen.




## Diverting Calls

You can customize your phone so that incoming calls from a particular person are transferred directly to a third person.

### To divert incoming calls from a contact to a third person:

1. Press the **Dir** soft key, and then select **Contact Directory**.

The Directory screen displays.

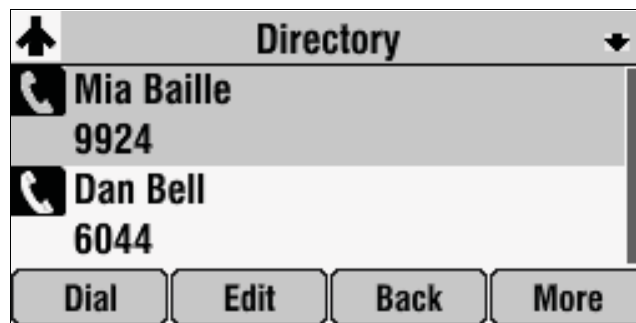



2. Scroll to the contact for whom you want to transfer calls.

You can use the \* key to Page Up and the # key to Page Down.

3. Press the **Edit** soft key.

The Edit Contact screen displays.

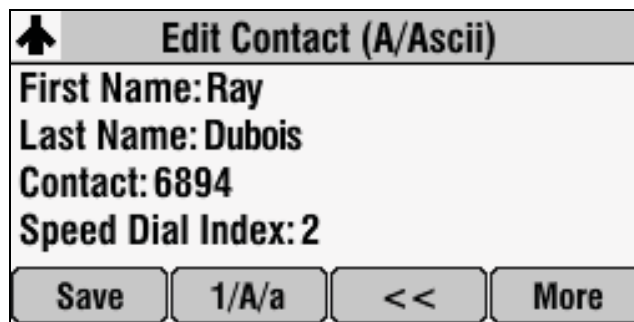

4. Scroll to the **Divert Contact** field and enter the number of the person to whom you want to divert the call. You can enter a maximum of 32 characters.
5. Scroll to the **Auto Divert** field.
6. Change the Auto Divert setting to **Enabled**. (To select Enabled, press the **Right** or **Left** scroll key.)
7. Press the **Save** soft key.
8. Press  twice to return to the idle screen.


## Understanding Shared Lines

**Note**

Shared lines is an optional feature that your system administrator sets up. Your system may not support it. For more information, contact your system administrator.

If two phones share a line, an incoming call to one number will cause both phones to ring. The call can be answered by either phone, but not both. If your phone shares a line, a shared line icon that is half black and half grey displays on the screen.

The following figure shows the shared line icon at the top left of the screen.

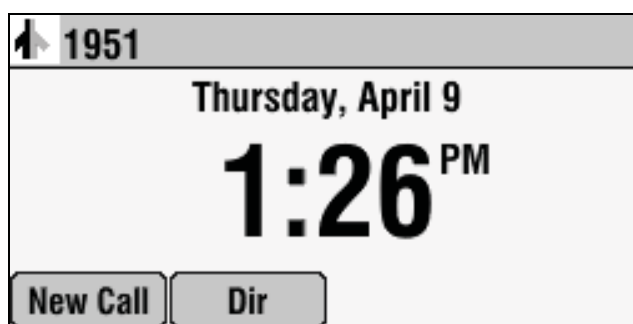

The shared line icon changes to a moving icon, and the LEDs glow a steady red when the line is in use remotely.

Calls on shared lines can be transferred, put on hold, or added to a conference.

**Note**

You cannot forward or reject calls on shared lines.

For information on answering calls with shared lines, see [Answering Calls](#) on page 3-6.

---

# Using the Basic Features of Your Phone

Your SoundStation IP 7000 conference phone is designed to be used like a regular conference phone on a public switched telephone network (PSTN). You can place calls, transfer a call to someone else, conduct a multi-participant conference call, or perform other basic and more advanced functions.

At any time, at most one active call may be in progress on your phone. The active call is the one that has audio associated with it. There may be multiple other calls, including a conference call, on hold.

This chapter provides introductory information and basic operating instructions for the phone. It includes the following topics:

- [Placing Calls](#) on page 3-2
- [Answering Calls](#) on page 3-6
- [Ending Calls](#) on page 3-6
- [Muting the Microphone](#) on page 3-7
- [Redialing Numbers](#) on page 3-7
- [Holding and Resuming Calls](#) on page 3-8
- [Hosting Conference Calls](#) on page 3-9
- [Transferring Calls](#) on page 3-17
- [Forwarding Calls](#) on page 3-19
- [Enabling Do Not Disturb](#) on page 3-21
- [Managing Speed Dial Entries](#) on page 3-22
- [Using Voice Mail](#) on page 3-24

If you require additional information or assistance with your new phone, contact your system administrator.

For information on the advanced features of your phone, refer to [Chapter 4, Using the Advanced Features of Your Phone](#).


## Placing Calls

**Note**

If your phone is connected to a Polycom HDX system, see [Using the Phone When it is Connected to a Polycom HDX System](#) on page 4-7. When you place a call, different soft keys display and options apply.

You can place a call off-hook (with a dial tone) or on-hook (without a dial tone). If you place a call off-hook, you can dial a contact using an IP address or URL, if this feature is enabled for your phone.

The phone screen displays the duration of active calls. The following figure shows an active call to Jacklyn Smith at directory number 1955 that has lasted 57 seconds.

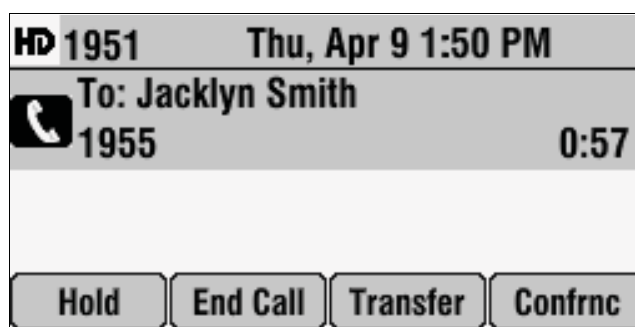


**To place a call on-hook (to dial a phone number):**

>> Enter the phone number of the person you want to call, and then press


 or the **Dial** soft key.

**To place a call off-hook (to dial a phone number, IP address, or URL):****Note**

Placing a call using an IP address or URL may not be enabled for your phone. For more information, see your system administrator.


1. Press  or the **New Call** soft key.

The Enter number screen displays.

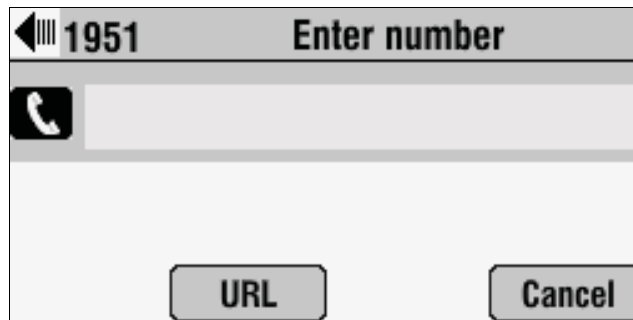


2. Do one of the following:
  - To dial a phone number, enter the phone number of the person you want to call.
  - To dial an IP address:
    - a Press the **URL** soft key.

The (123) Enter number screen displays.

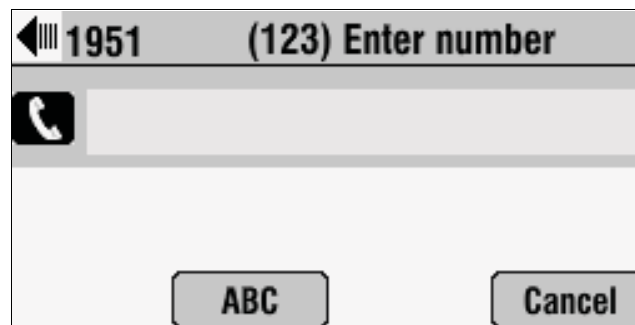


- b Enter the IP address of the person you want to call.

To enter ".", press .

- To dial a URL:


- a Press the **URL** soft key.

The (123) Enter number screen displays.

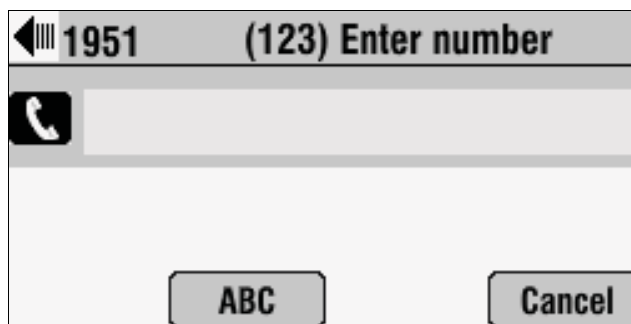

- b Press the **ABC** soft key.


The (ABC) Enter number screen displays

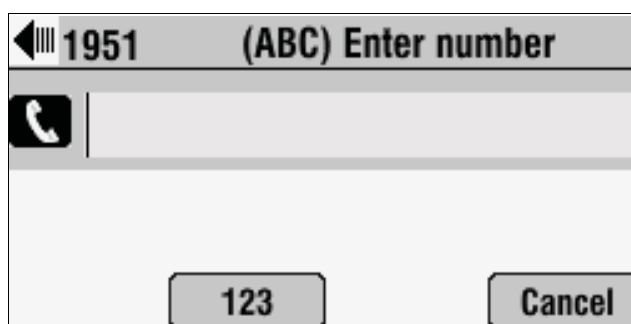

- c Enter the URL of the person you want to call.

To enter the letters that display on a number key, press the number key one or more times.


For example, to enter "a," press  once. To enter "c," press

 three times quickly.

To enter "." and "@", press  one or more times quickly.

**Note**

When you dial a URL, the maximum number of characters you can enter is 32.

3. Press  or the **Dial** soft key.

**Note**

Instead of entering a phone number from memory, you can access call lists, directories, and speed dial lists to display and dial the number for you.

- To access a call list, press the **Left**, **Right**, or **Down** scroll key to access the received, placed, or missed calls list. Scroll to the call you want to dial, and then press the **Dial** soft key. For more information, see [Using Call Lists](#) on page 2-14.
- To access your Contact Directory or Corporate Directory (if enabled for your phone), press the **Dir** soft key, and then select **Contact Directory** or **Corporate Directory**. Scroll to or search for the contact you want to dial, and then press the **Dial** soft key. For more information, see [Managing Contacts](#) on page 2-17.
- To place a call using a speed dial index number, press the **Up** scroll key, scroll to the person you want to call, and then press the **Dial** soft key. For information on other ways to use speed dial, see [Placing Calls Using Speed Dial](#), below.


## Placing Calls Using Speed Dial

Use a speed dial index number for quick dialing. Speed dial index numbers are associated with entries in your Contact Directory. For information on managing speed dial entries from your Contact Directory, see [Managing Speed Dial Entries](#) on page 3-22.


**Note**

From the idle screen, press the **Up** scroll key to quickly access your list of speed dial entries.

### To place a call using a speed dial index number:

1. Do one of the following:
  - If you know the contact's speed dial index number, enter the number, and then press #.
  - Press the **Up** scroll key.
  - Press , and then select **Features > Speed Dial**.

The Speed Dial Info screen displays.

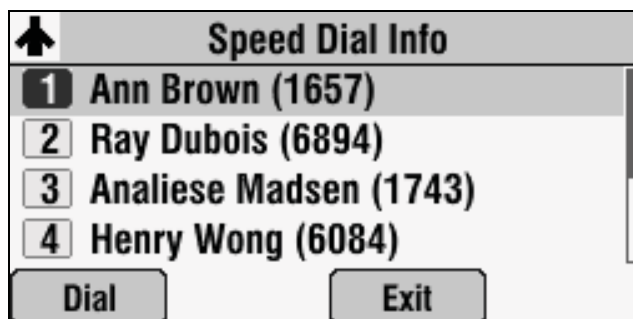


2. Do one of the following:
  - Enter the speed dial index number.or
  - If the contact you want to call is not already highlighted, scroll to the contact, and then press the **Dial** soft key.

The call is placed.

## Answering Calls

### To answer a call:

>> Press  or the **Answer** soft key.

The LEDs blink green when the phone rings.

#### Note

- To ignore incoming calls, press the **Reject** soft key (for private lines) or the **Silence** soft key (for shared lines). To prevent your phone from ringing, enable the **Do Not Disturb** feature (see [Enabling Do Not Disturb](#) on page 3-21).
- You can forward incoming calls by pressing the **Forward** soft key. See [Forwarding Calls Dynamically](#) on page 3-21.
- If you set up your phone with a silent ring, press the **Answer** soft key to answer the call.
- To answer a call from a mobile phone or computer calling application, see [Using Computer or Mobile Audio with the Conference Phone](#) on page 4-1.


### To answer a call on a shared line:

1. Answer the incoming call.
2. Press the **Hold** soft key.

Anyone on another phone configured to use the same shared line may take the call by selecting the call on their phone screen.

## Ending Calls

### To end a call:

>> Press  or the **End Call** soft key.


#### Note

You cannot end a call that is on hold until you resume the call. To end a call on hold, scroll to the call on hold, press the **Resume** soft key, and then press the **End Call** soft key.



## Muting the Microphone

### To mute the microphone:

>> During a call, press .



The LEDs glow red, and the mute icon, , displays on the phone screen.

The other person (or people) cannot hear you. You can still hear all other people while Mute is enabled.

To turn off the Mute feature, press  again.

### To mute the microphone if you use extension microphones:

>> Press  on the phone or the  button on the top of an extension microphone.

To turn off the Mute feature, press  or  again.

#### Note

When you press the Mute button on the phone, or on any extended microphone connected to the phone, you mute the microphone on the phone and all extended microphones connected to the phone.

## Redialing Numbers

You can redial the last number you dialed, or search a list of placed calls to find a previously-dialed number.

### To redial the last number dialed:


>> Press .

**To redial a previously dialed number:**

1. Press the **Dir** soft key, and then select **Call Lists > Placed Calls**.

The Placed Calls screen displays.



2. Scroll to the number you want to redial, and then press  or the **Dial** soft key.

## Holding and Resuming Calls


**To hold a call:**

- >> During a call, press the **Hold** soft key. The LEDs blink red to indicate that a call is on hold.

**Note**

You cannot end a call that is on hold. You must resume the call first.

The following figure shows James Smith on hold. The Resume soft key now displays on the screen.

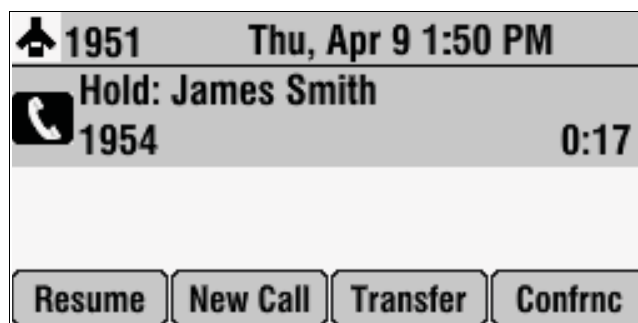

**To resume a call on hold:**

- >> While a call is on hold, press the **Resume** soft key.

## Hosting Conference Calls

You can create a conference with up to two other people using the phone's local conference feature. To quickly set up a conference, you can use the Join soft key to create a conference between an active call and a call on hold.

The conference management feature allows you to view and manage each participant in the conference call. From the Manage Conference screen, you can mute, hold, and remove individual participants.

### Note


You can host and manage conferences with audio from computer calling applications and mobile phones, as well as video if your phone is connected to a Polycom HDX system. For more information, see [Using Computer or Mobile Audio with the Conference Phone](#) on page 4-1 and [Using the Phone When it is Connected to a Polycom HDX System](#) on page 4-7.

This section includes the following topics:

- [Setting Up Conferences](#) on page 3-9
- [Managing Conferences](#) on page 3-11
- [Holding and Resuming Conferences](#) on page 3-15
- [Splitting Conferences](#) on page 3-16
- [Ending Conferences](#) on page 3-16


## Setting Up Conferences

You can set up a conference in one of two ways:


- Using  or the **Confrc** soft key.
- Using the **Join** soft key, if you have an active call and a call on hold.

### Setting Up a Conference Using the Conference Key or Soft Key


To set up a conference using the Conference key or soft key:

1. Call the first person. See [Placing Calls](#) on page 3-2.
2. Press  or the **Confrnc** soft key to create a new call. The active call is placed on hold.

The Enter number screen displays.

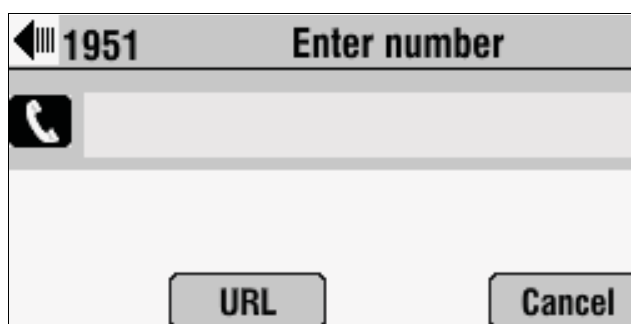


**Note** If configured for single key-press conferences, the conference participant hears the dial tone and ringback when the conference host places the call to the new person.

3. Place a call to the second person. See [Placing Calls](#) on page 3-2.
4. When the second person answers, press  or the **Confrnc** soft key again to join all people in the conference.

**Note** If configured for single key-press conferences, you do not have to press the Conference key or the Confrnc soft key again.

The Active:Conference screen displays.

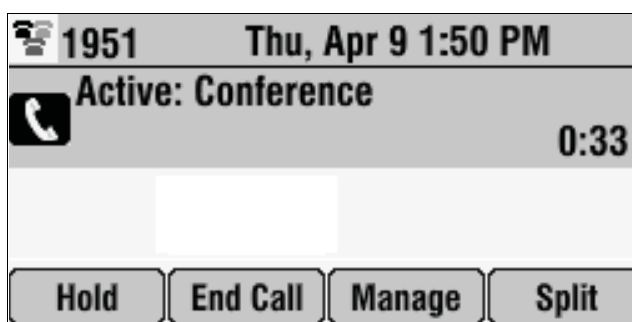


### Setting Up a Conference With an Active Call and a Call on Hold

If you are currently in an active call, and you have another call on hold, you can create a conference call between the active call, the call on hold, and yourself, by pressing the **Join** soft key.

#### To set up a conference call with an active call and a call on hold:

>> If you have an active call and a call on hold, press the **Join** soft key.

The Active:Conference screen displays.

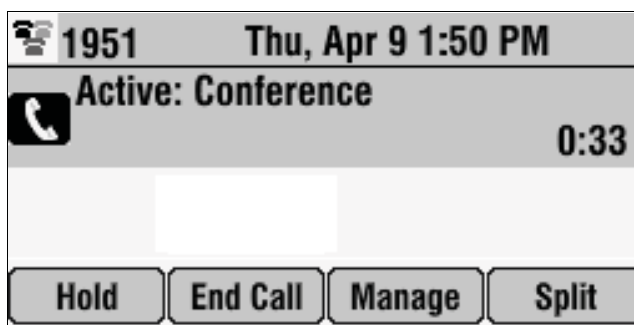


A conference is created with the active call, the call on hold, and yourself.

## Managing Conferences

To manage a conference, you must currently be in an active conference call. From the Active:Conference screen, you can press the **Manage** soft key to manage the individual participants in the conference, or end the conference call.


The following figure shows the Manage soft key that displays when you are in an active conference.

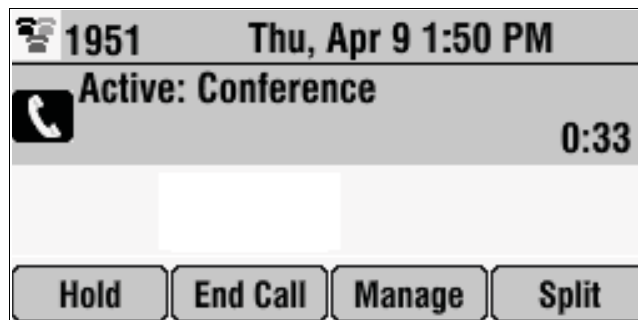

**To manage a conference:**

>> From the Active:Conference screen, press the **Manage** soft key.

The Manage Conference screen displays.

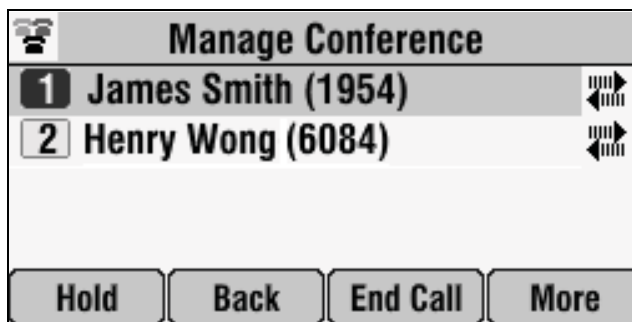

From the Manage Conference screen, you can scroll to a conference participant and manage the participant's conference participation, or end the conference call.

You can access the following soft keys from the Manage Conference screen:


- **Hold** – Puts a selected participant on hold. The held participant cannot hear any other participants and no participant can hear the held participant.
- **Back** – Returns you to the Active:Conference screen.
- **End Call** – Ends the conference call. The other two participants remain connected. (To remove a conference call participant, see [Removing Conference Call Participants](#) on page 3-14.)
- **Info** – Provides additional information about the selected participant.
- **Far Mute** – Mutes the selected participant. The muted participant can hear all participants, but no participant can hear the muted participant.

### Muting Conference Call Participants



**To mute a conference call participant:**

>> From the Manage Conference screen, scroll to the participant you want to mute, and then press the **Far Mute** soft key.

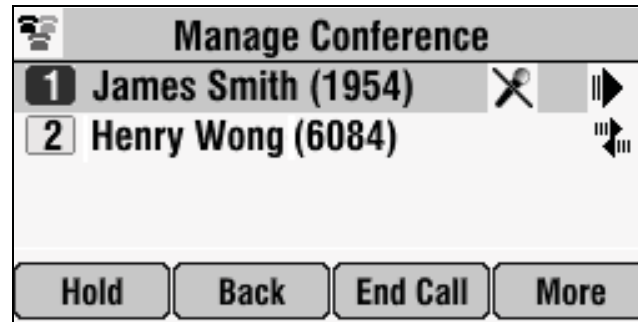The following figure shows the far mute feature applied to James Smith. The “far mute” icon displays next to his name, and the UnMute soft key appears.



The muted participant can hear all participants, but no participant can hear the muted participant.

If you press  instead of the **Far Mute** soft key, all other participants can hear each other, but they cannot hear you. When you press , the LEDs glow red.

To un-mute the participant, press the **UnMute** soft key.

### Placing Conference Call Participants on Hold


You can select a conference call participant and place the participant on hold. You can return the participant to the conference at any time by pressing the **Resume** soft key.

If you want to place a conference call on hold, see [Holding and Resuming Conferences](#) on page 3-15.

#### To place a conference call participant on hold:

- >> From the Manage Conference screen, scroll to the participant you want to place on hold, and then press the **Hold** soft key.

The following figure shows James Smith on hold. The “on hold” icon displays next to his name, and the Resume soft key appears.

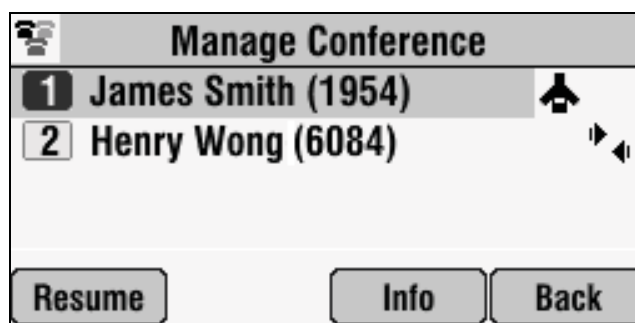


The held participant cannot hear any participants and no participant can hear the held participant.

To return the participant to the conference, scroll to the participant, and then press the **Resume** soft key.

If the held participant presses the Hold soft key on their phone, the participant will still be on hold even if you press the Resume soft key.

### Removing Conference Call Participants

#### To remove a conference call participant:

>> From the Manage Conference screen, scroll to the participant you want to remove, and then press .

The participant is removed from the conference, the conference call ends, and the other participant becomes the active call.

#### Note

If you press the **End Call** soft key instead, you end the conference call. The other participants remain connected.




### Obtaining Information About Conference Call Participants

You can display information about a conference call participant, such as their name and number, or if they are on hold.

#### To display information about a conference call participant:

1. From the Manage Conference screen, scroll to the participant whose information you want to obtain.
2. Press the **Info** soft key.

The Participant Info screen displays.

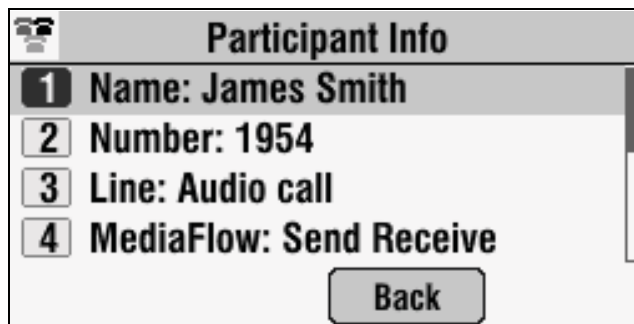

3. Press the **Back** soft key to return to the Manage Conference screen.

## Holding and Resuming Conferences


When you place a conference call on hold, you place all other conference participants on hold. Conference call participants cannot hear each other.

To place an individual participant on hold, see [Placing Conference Call Participants on Hold](#) on page 3-13.

#### To place a conference call on hold:

- >> From the Active:Conference screen, press the **Hold** soft key.

The Hold:Conference screen displays. The other participants in the conference call are placed on hold.

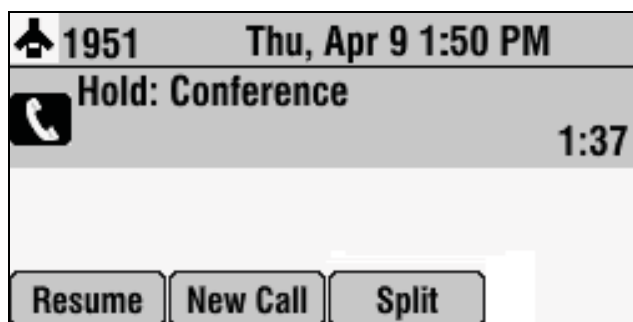

From the Hold:Conference screen, you can do the following:

- To resume the conference call, press the **Resume** soft key. The Active:Conference screen will display again.
- To place a call to a new person, press the **New Call** soft key. The conference remains on hold, and the new call becomes the active call.
- To end the conference call and place each conference participant on hold, press the **Split** soft key.

## Splitting Conferences

When a conference is established, a Split soft key is available. When you split a conference, you end the conference and place all participants on hold.

### To split a conference:

- >> From the Active:Conference or Hold:Conference screen, press the **Split** soft key.

The conference ends, and all calls are split into individual calls and placed on hold.

## Ending Conferences

You can end a conference, and your connection to the other participants, by pressing the **End Call** soft key. When you use the End Call soft key, the other participants remain connected.

### To end a conference:

- >> From the Active:Conference or Manage Conference screen, press the **End Call** soft key.

The two other participants remain connected.

## Transferring Calls

A call can be transferred in one of three ways:

- Consultative transfer – You have the option of either talking to the person to whom you are transferring the call, or you can choose not to talk to the person, and complete the transfer when you hear the person’s ring-back sound.
  - [Performing a Consultative Transfer](#) on page 3-17.
- Blind transfer – The call is automatically transferred after you dial the number of the person to whom you want to transfer the call. You do not have the option of talking to the person.
  - [Performing a Blind Transfer](#) on page 3-18.
- Attended transfer – Conference call participants are automatically connected to each other after you exit a conference.
  - Set up a conference call and then end your participation. For more information, refer to [Ending Conferences](#) on page 3-16.


### Performing a Consultative Transfer

Perform a consultative transfer if you want to talk to the person to whom you are transferring the call. Or, you can choose not to talk to the person. In this case, you wait for the person’s ring-back sound, and then transfer the call.

#### To transfer a call:

1. During a call, press the **Transfer** soft key. The call is placed on hold.

The Enter number screen displays.

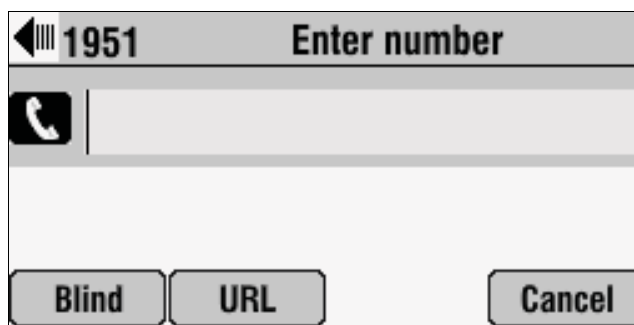

2. Place a call to the person to whom you want to transfer the call. See [Placing Calls](#) on page 3-2.

3. When you hear the ring-back sound, press the **Transfer** soft key. The transfer is complete. If you want to talk privately to the person to whom you are transferring the call before the transfer is complete, wait until the person answers the call, talk to the person, and then press the **Transfer** soft key.

You can cancel the transfer before the call connects by pressing the **Cancel** soft key.


## Performing a Blind Transfer

When you use a blind transfer, you transfer a call without speaking to the person to whom you are transferring the call. The call is automatically transferred as soon as you dial the person's number.

### To perform a blind transfer:


1. During a call, press the **Transfer** soft key.

The Enter number screen displays, with the Blind soft key.

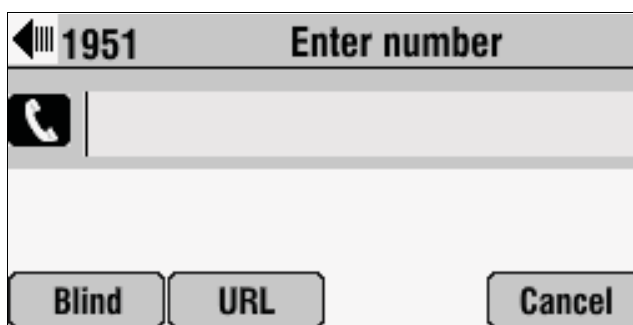

2. Press the **Blind** soft key.

The Blind transfer to screen displays.

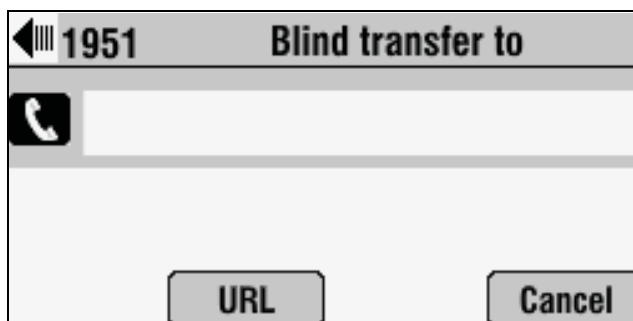

- Place a call to the person to whom you want to transfer the call. See [Placing Calls](#) on page 3-2.

(If you want to cancel the transfer (before the call is placed), and return to the original call, press the **Cancel** soft key.)

The call automatically transfers to the person you specified.

## Forwarding Calls

### Note

Your company's settings may override this feature. For more information, contact your system administrator.

Call forwarding is not available on shared lines.


You can set up your phone to forward incoming calls to another person (static forwarding) or you can forward a call as your phone rings (dynamic forwarding). Your phone will forward calls even if you enable the Do Not Disturb feature.

You can also reject calls from a particular contact (by sending the call to your voice mail system), or divert calls from a particular contact to another person. For more information, see [Managing Incoming Calls](#) on page 2-29.


## Forwarding Calls Statically

You can set up your phone to forward calls to another number.

### To forward calls to another number:

- Press , and then select **Features > Forward**.

The Forwarding Type Select screen displays.

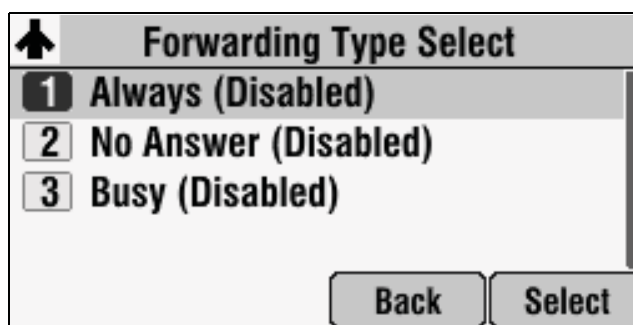


2. Scroll to the forwarding type you want, and then press **Select**. The options are:
  - **Always** – To forward all incoming calls.
  - **No Answer** – To forward all unanswered incoming calls.
  - **Busy** – To forward calls that arrive when you are already in a call.
3. Do one of the following:
  - If you selected **Always**, enter a number to forward all incoming calls to.
  - If you selected **No Answer**, do the following:
    - a In the **Contact** field, enter a number to forward all unanswered incoming calls to.
    - b In the **Forward After Rings** field, enter how many rings to wait before forwarding the call (one ring is approximately six seconds). The recommended value is two rings.
  - If you selected **Busy**, enter the number to forward all future incoming calls to when you are already in another call.
4. Press the **Enable** soft key.

If you selected the forwarding type **Always**, the text “**Call Forward Enabled**” and a moving arrow display on the idle screen next to the directory number.

#### To disable call forwarding:

1. Press , and then select **Features > Forward**.

The Forwarding Type Select screen displays.

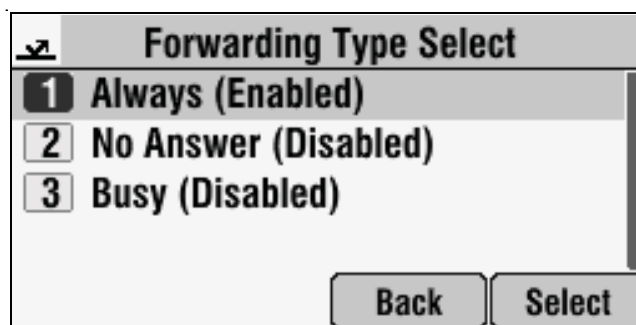

2. Scroll to the forwarding type you want to disable, and then press **Select**.
3. Press the **Disable** soft key.


## Forwarding Calls Dynamically

You can manually forward a call to another number while your phone rings.

### To forward an incoming call to another extension:

1. While your phone rings, press the **Forward** soft key.

The Call Forwarding screen displays.

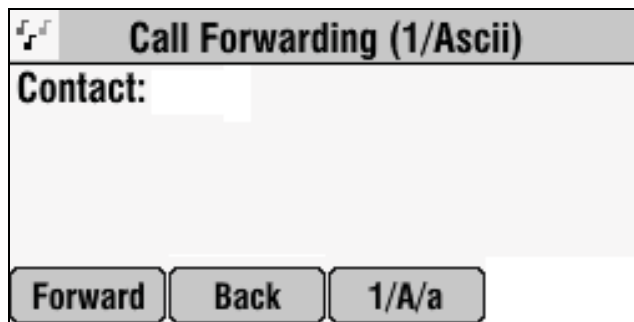

2. Enter the phone number to forward the incoming call to.

Your phone displays the last number you forwarded calls to (either statically or dynamically). If you previously set a forwarding number and want to enter a new one, use the << soft key to delete the number.

3. Press the **Forward** soft key.


The incoming call is forwarded to the other person. If call forwarding is disabled, all future calls will not be forwarded and forwarding will remain disabled.

## Enabling Do Not Disturb

To prevent your phone from ringing, activate the Do Not Disturb feature.

Calls you receive while Do Not Disturb is enabled will display in your Missed Calls list (see [Using Call Lists](#) on page 2-14). If you have chosen to forward your calls to another number, calls will be sent to that number if you enable the Do Not Disturb feature.


### To enable and disable Do Not Disturb:


1. Press , and then select **Features**.


The Features screen displays. If Do Not Disturb is not highlighted, scroll to it.




2. To toggle Do Not Disturb on and off, press **Select**.

When you enable Do Not Disturb, a flashing icon, , displays at the top left of the screen.

When you disable Do Not Disturb, the registered line icon, , displays instead.

3. Press  to return to the idle screen.

If you enabled Do Not Disturb, the idle screen displays a flashing icon, , next to the directory number.

## Managing Speed Dial Entries

Use the speed dial feature for fast, automated dialing. To use speed dial, you enter a speed dial index number instead of entering a complete phone number.

When you create a Contact Directory entry, the phone automatically assigns a Speed Dial index to the entry. You can change the index number, or delete it.

### Note

Only entries in your Contact Directory can be set up as speed dial entries. To create a new Contact Directory entry with a speed dial index number, see [Adding Contacts to Your Local Contact Directory](#) on page 2-20.


The following steps describe how to update a speed dial entry for a contact. To place a call using a speed dial number, see [Placing Calls Using Speed Dial](#) on page 3-5.



**To update a speed dial entry in your local Contact Directory:**


1. Press the **Dir** soft key, and then select **Contact Directory**.

The Directory screen displays.

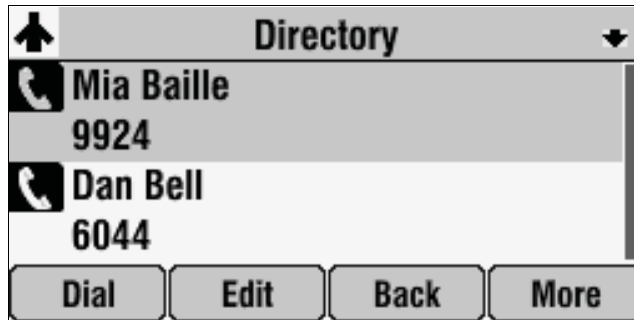


2. Scroll to the user's entry, and then press the **Edit** soft key.

The Edit Contact screen displays.

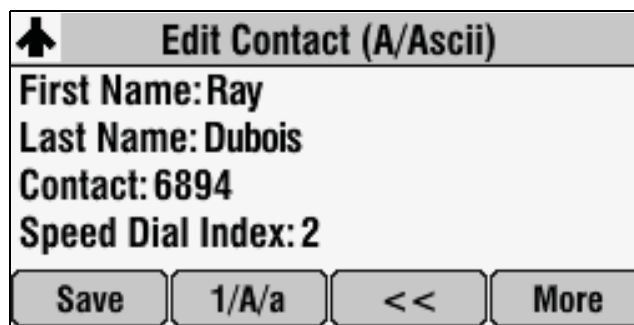

3. Scroll to **Speed Dial Index**, and then update the speed dial index number. Use the << soft key to update an existing entry.

You can assign any unused speed dial index number from 1 to 99. If you assign a speed dial index number that already exists, or you enter an invalid speed dial index number (for example, 0 or 00), an error message displays.


4. Press the **Save** soft key.
5. Press  twice to return to the idle screen.

## Using Voice Mail

### Note

Voice mail is an optional feature that your system administrator sets up. Your system may not support it. For more information, contact your system administrator. Screen options may vary with your application. Voice mail may be accessible with a single key press. Contact your system administrator about this option.


Your voice mail is saved in a centralized location and may be accessed from your phone. Your phone may indicate voice mail by the following:


- An icon, , on the phone screen
- A stutter dial tone instead of a normal dial tone

### To listen to voice mail messages:

1. Press , and then select **Features > Messages > Message Center**.

The Messages screen displays.

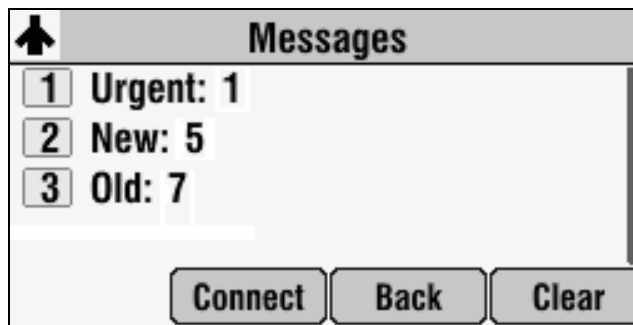

2. To listen to your voice mail, press the **Connect** soft key, and then follow the voice or visual prompts on the screen.
3. Press  to return to the idle screen.

---

# Using the Advanced Features of Your Phone

This chapter provides operating instructions for the advanced features of your SoundStation IP 7000 conference phone. If you require additional information or assistance with these features, contact your system administrator.

For information on the basic features of your phone, refer to Chapter 3, [Using the Basic Features of Your Phone](#).

This chapter includes the following topics:

- [Using Computer or Mobile Audio with the Conference Phone](#) on page 4-1
- [Using the Phone When it is Connected to a Polycom HDX System](#) on page 4-7
- [Handling Multiple Call Appearances](#) on page 4-18
- [Using Buddy Lists](#) on page 4-19
- [Restarting the Phone](#) on page 4-26

## Using Computer or Mobile Audio with the Conference Phone


You can connect audio from a computer calling application, or from a mobile phone, to your conference phone for hands-free conversations. You initiate and end conversations from your computer calling application or your mobile phone interface.

From your conference phone, you can do the following:

- Accept a computer or mobile audio source while you have an active call (including a conference call), or calls on hold.
- Place a computer or mobile audio source on hold.
- Join, split, and host conference calls between the calls on your conference phone and the computer or mobile audio source.
- Accept calls from other phones while you listen to computer or mobile audio.

If you connect your computer calling application or mobile phone to your conference phone when your conference phone is idle, the computer or mobile audio automatically becomes the active call, and you immediately hear any audio associated with the mobile phone or computer calling application.

The following figure shows the conference phone screen if the conference phone is idle and you connect your computer calling application or mobile phone to it. You can place the computer or mobile audio on hold (and then initiate a new call or conference call), or accept a call from another phone while you listen to computer or mobile audio.

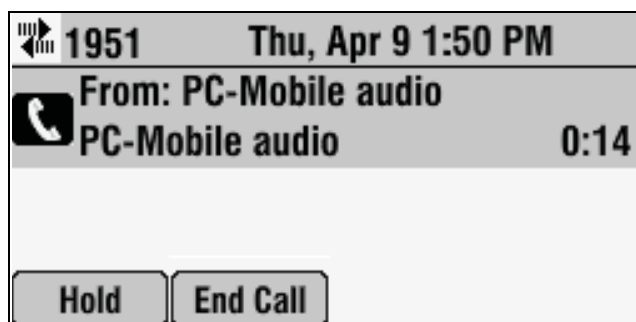

**Note** Audio from computer calling applications or mobile phones does not display in your conference phone Call Lists.

For information on how to connect your conference phone (in a single or two-phone setup) to computer calling applications and mobile phones, see the *Setup Guide for the Polycom SoundStation IP 7000 Phone*, available at [www.polycom.com/voicedocumentation](http://www.polycom.com/voicedocumentation).

**Note** You can use your conference phone that is connected to a computer calling application or a mobile phone to handle video calls and conferences. See [Handling Computer or Mobile Audio When Your Phone is Connected to a Polycom HDX System](#) on page 4-18.

## Listening to Computer or Mobile Audio


You can connect the computer or mobile audio source while your conference phone is in an idle state, or when you have an active call.

### To listen to computer or mobile audio when your conference phone is idle:

- >> When your conference phone is idle, connect the mobile phone or computer calling application to your conference phone. (See the *Setup Guide for the Polycom SoundStation IP 7000 Phone*, available at [www.polycom.com/voicedocumentation](http://www.polycom.com/voicedocumentation).)

The computer or mobile audio automatically becomes the active call, and you can hear any audio associated with the computer calling application or mobile phone. If there isn't any audio, you can wait for a call, answer it from your computer calling application or mobile phone interface, and then listen to the audio on your conference phone.


The following figure shows what the screen looks like when you connect a computer calling application or mobile phone (with or without a current call) to the conference phone when the conference phone is idle.

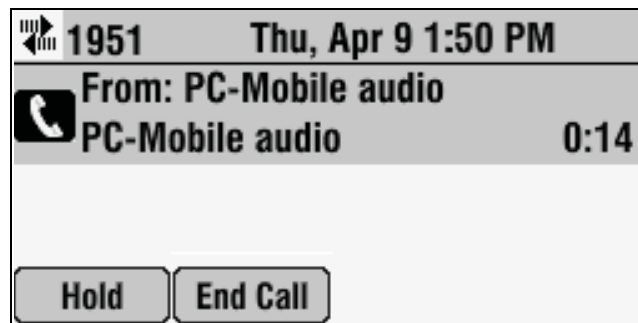

**To listen to computer or mobile audio when the conference phone has another call:**

1. Do one of the following:
  - While the conference phone has an active call, connect the computer calling application or mobile phone to the conference phone. (See the *Setup Guide for the Polycom SoundStation IP 7000 Phone*, available at [www.polycom.com/voicedocumentation](http://www.polycom.com/voicedocumentation).)


The conference phone screen shows a computer or mobile audio source. The LEDs blink green to indicate the audio source.

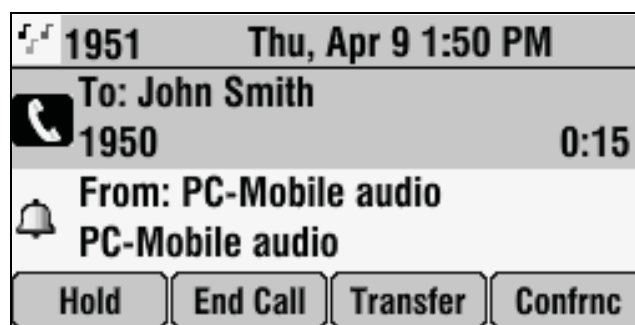

or


- If the conference phone has a call on hold, connect the computer calling application or mobile phone to the conference phone. (See the *Setup Guide for the Polycom SoundStation IP 7000 Phone*, available at [www.polycom.com/voicedocumentation](http://www.polycom.com/voicedocumentation).)

The conference phone screen shows a computer or mobile audio source. The LEDs blink green to indicate the audio source.

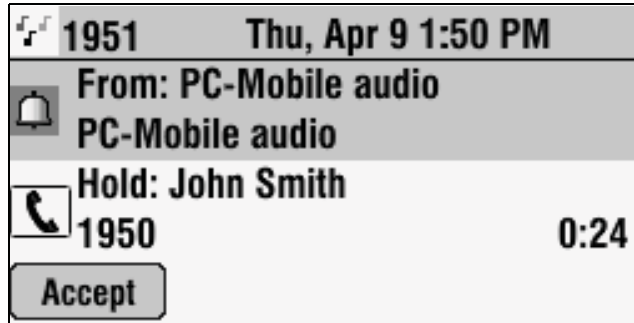

2. Do one of the following:
  - If the conference phone has an active call, press the **Hold** soft key.  
The active call is placed on hold, and the computer or mobile audio becomes the active call.
  - or
  - If the conference phone has a call on hold, press the **Accept** soft key.  
The computer or mobile audio becomes the active call.

You can place the computer or mobile audio on hold, or use the Join soft key to create a conference call with the call on hold and the computer or mobile audio.

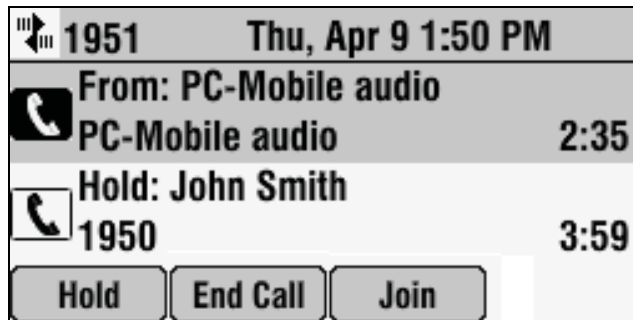

## Ending Computer or Mobile Audio

To remove the computer or mobile audio source, disconnect the Computer Calling Cable or Mobile Phone Cable from the conference phone.

If you want to keep the connection for future computer or mobile audio calls, end the call from your computer or mobile phone, but do not remove the Computer Calling Cable or Mobile Phone Cable. The conference phone screen will still display "From:PC-Mobile audio," and the computer or mobile audio will continue to be the active call.

## Placing Computer or Mobile Audio on Hold

**To place computer or mobile audio on hold:**

>> From your conference phone, scroll to **PC-Mobile audio**, and then press the **Hold** soft key. If you want, you can place a new call, or create a conference between the computer or mobile audio and another person.

Press the **Resume** soft key to make the computer or mobile audio active again.


## Creating Conference Calls with Computer or Mobile Audio

You can set up conference calls with computer or mobile audio using the **Cnfrnc** or **Join** soft key.

**To create a conference call with a computer or mobile audio source, do one of the following:**

- If you have an active computer or mobile audio source, place the call on hold, and then use the **Cnfrnc** soft key to set up a conference. See [Hosting Conference Calls](#) on page 3-9.
- If you have an active computer or mobile audio source and another call on hold, scroll to the call on hold, and then press the **Join** soft key.
- If you have an active conference call, and you connect computer or mobile audio, scroll to the incoming computer or mobile audio, and then press the **Join** soft key.

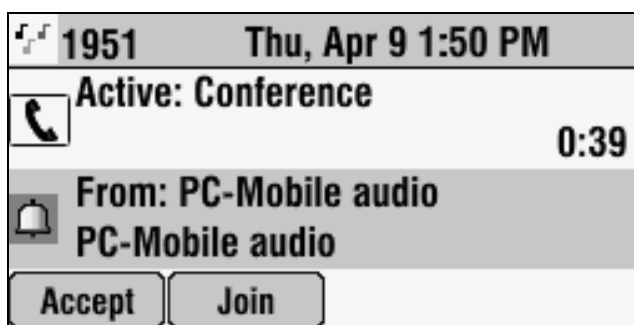

The following figure shows the Join soft key that displays when there is an active conference call and an incoming computer or mobile audio source.



You manage conference calls with computer or mobile audio just as you do with other phone calls. For detailed information on setting up conferences using the **Confrcnc** and **Join** soft keys, as well as managing conference calls, see [Hosting Conference Calls](#) on page 3-9.

## Adjusting the Volume of Computer or Mobile Audio

### To adjust the speaker volume:

>> While you listen to computer or mobile audio, press either  or  to adjust the speaker volume.

### To mute the microphone:

>> While you listen to computer or mobile audio, press .

The LEDs glow red to indicate that the other person (or people) cannot hear you. You can still hear all other people while Mute is enabled.

To turn off the Mute feature, press  again.



## Using the Phone When it is Connected to a Polycom HDX System

### Note

This section describes how to use your phone when it is connected to a Polycom HDX system. For detailed information on how to use a Polycom HDX system, see the Polycom HDX documentation at [www.polycom.com/vedeodocumentation](http://www.polycom.com/vedeodocumentation).

You can connect your phone to a Polycom HDX system that runs software version 2.5 or later. Your phone must run SIP application 3.1.1 or later.

You can perform many of the following phone functions using your Polycom HDX system's remote control or keypad. For detailed information on how to use the remote control or keypad, see the user guide for your Polycom HDX system at [www.polycom.com/vedeodocumentation](http://www.polycom.com/vedeodocumentation).


You can set up your phone with a Polycom HDX system so that your phone can conduct video calls and conferences.

When you connect your phone to a Polycom HDX system, your phone displays different soft keys:


- Video – Allows you to place a video call
- Phone – Allows you to place an audio-only call
- Content – Allows you to show content to near-site participants, as well as to far-site participants with whom you are exchanging video.
- Add Video – Allows you to establish a conference between yourself, an active call or call on hold, and the new person you dial. Or, automatically joins the new person you dial to an active conference.
- Add Phone – When an audio-only call is active or on hold, allows you to add an additional call to your phone. If you have a video call, pressing the Add Phone soft key automatically creates a conference between yourself, the video call, and the new person you dial.

### Note


When your phone is connected to a Polycom HDX system, there is no New Call soft key. To initiate a call, press the Video or Phone soft keys. For more information, see [Placing Calls When Your Phone is Connected to a Polycom HDX System](#) on page 4-8 and [Ending Calls When Your Phone is Connected to a Polycom HDX System](#) on page 4-13.

A video call or a video conference (a conference that has at least one video call), displays the video icon, .

The following figure shows a video call to Jacklyn Smith.

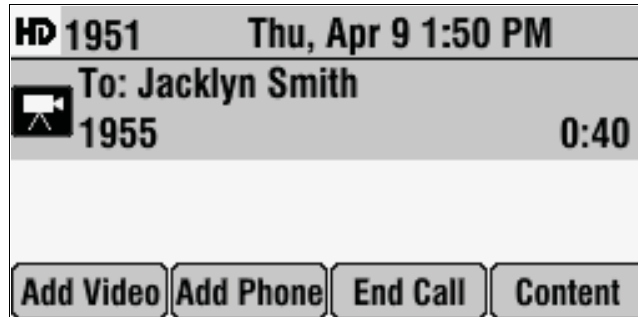

The following figure shows an active conference call in which one participant is connecting with video.

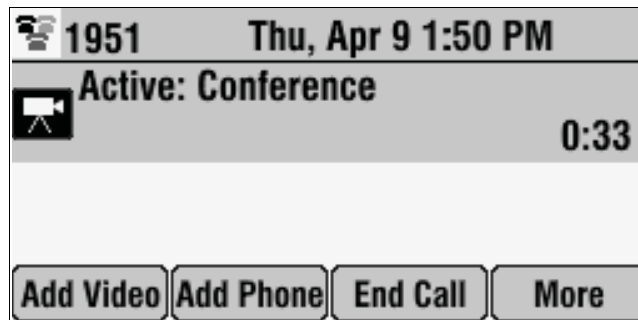

## Placing Calls When Your Phone is Connected to a Polycom HDX System

You can place a call when your phone is idle, when you have an active call, or when you have a call on hold.

### Placing Calls When You Don't Have Any Active Calls

When you place a call, you must specify if the call will be an audio-only call or a video call.

**To place a call when you don't have any active calls:**

1. Do one of the following:

- Press .

The message “Video or Phone Call?” displays. To place a video call, press the **Video** soft key. To place an audio-only call, press the **Phone** soft key.

or

- To place a video call, press the **Video** soft key. To place an audio-only call, press the **Phone** soft key.

2. Do one of the following:

- To enter a phone number, enter the number of the person you want to call.

or

- To enter an IP address or URL:

**Note**

Placing a call using an IP address or URL may not be enabled for your phone. For more information, see your system administrator.


If you are making an audio-only call, press the **URL** soft key. Then, toggle the **ABC** and **123** soft keys to enter the URL or IP address of the person you want to call.

If you are making a video call, toggle the **ABC** and **123** soft keys to enter the URL or IP address of the person you want to call.


You can switch between entering a number or IP address, or a URL, by pressing the **123** and **ABC** soft keys.

To enter the letters that display on a number key, press the number key one or more times.


For example, to enter “a,” press  once. To enter “c,” press

 three times quickly.

To enter “.” and “@”, press  one or more times quickly.

3. Press  or the **Dial** soft key.

The following figure shows a video call to Jacklyn Smith.

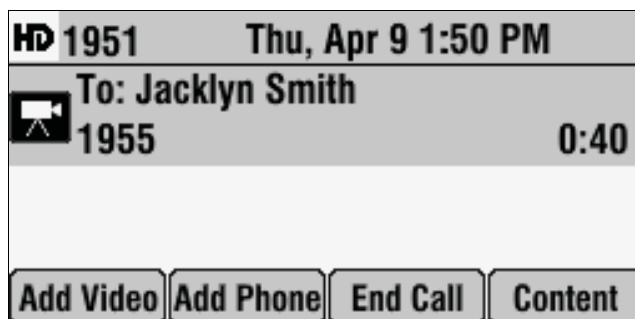

### Placing Calls When You Have an Audio-Only Call on Hold

**Note**

Only audio-only calls can be on hold. Video calls cannot be on hold.


When an audio-only call is on hold, you can place a separate audio-only call or video call without setting up a conference. When the call is placed, the phone will display the call on hold and the active call.

#### To place a call when you have a call on hold:

>> With an audio-only call on hold, place a call (see [Placing Calls When You Don't Have Any Active Calls](#) on page 4-8).

When the other person answers the call, the phone displays a call on hold and an active call.

The following figure shows a video call and an audio-only call on hold.

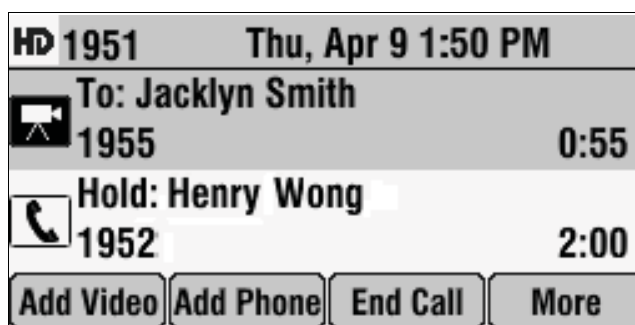

### Placing Calls When You Have an Active Audio-only Call or a Video Call

If you place a call when you have an active audio-only call or video call, you automatically create a conference between yourself, the active call or video call, and the new person you call. For more information, see [Setting Up Conferences](#) on page 4-14.

If you have an active audio-only call, you can choose not to create a conference. You can place the active call on hold, and then place a separate call to another person (see [Placing Calls When You Have an Audio-Only Call on Hold](#) on page 4-10).

## Placing Calls Using Call Lists, Directories, Speed Dial Index Numbers, and the Redial Key When Your Phone is Connected to a Polycom HDX System

Instead of entering phone numbers, URLs, and IP addresses from memory, you can access call lists, directories, and speed dial lists to place calls to audio-only and video endpoints. You can also redial numbers. For more information, see [Placing Calls](#) on page 3-2 and [Redialing Numbers](#) on page 3-7.

#### Note


The directories on your phone and on the Polycom HDX system are not integrated. Directory entries on the phone do not display on the Polycom HDX system, and directory entries on the Polycom HDX system do not display on the phone.

## Answering Calls When Your Phone is Connected to a Polycom HDX System

### Answering Calls When You Don't Have Any Active Calls

You answer an incoming call in the same way you answer calls if your system is not connected to a Polycom HDX system.

#### To answer an incoming call:

>> Press  or the **Answer** soft key. For more information, see [Answering Calls](#) on page 3-6.


### Answering Calls When You Have an Audio-Only Call on Hold

#### Note


Only audio-only calls can be on hold. Video calls cannot be on hold.

When you answer a call when you have an audio-only call on hold, your phone displays two call appearances: one for the call on hold, and one for the active call.

### To answer an incoming call when you have a call on hold:

>> Press  or the **Answer** soft key.

The following figure shows a video call and an audio-only call on hold.

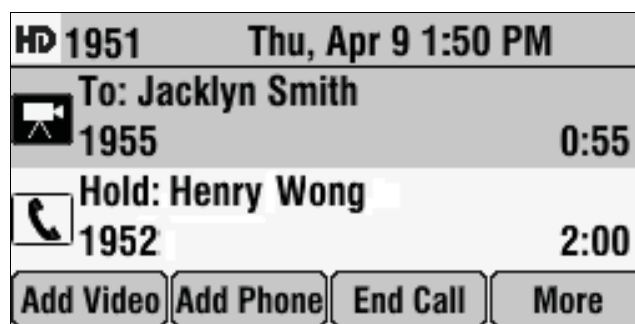

If you want to create a conference between the call on hold (audio-only) and an active audio-only or video call, scroll to either call, and then press the **Join** soft key.


### Answering Calls When You Have an Active Call

If you answer a call when you have a video call, a conference is automatically created between yourself, the video call, and the call you answer.

If you answer a call when you have an active audio-only call, the phone places the active call on hold, and the call you answer becomes the active call.


### To answer a call when you have an active call:

>> Do one of the following:

- If you have a video call, and an incoming call arrives, press  or the **Join** soft key.

A conference is automatically created between yourself, the video call, and the call you answer.

or


- If you have an active audio-only call, and an incoming call arrives, press  or the **Answer** soft key.

The active call is placed on hold, and the new call becomes the active call. The phone displays two call appearances: one for the call on hold, and one for the active call.

## Ending Calls When Your Phone is Connected to a Polycom HDX System

### To end a call:

>> Scroll to the call, and then press  or the **End Call** soft key.

To end a call on hold, scroll to the call on hold, press the **Resume** soft key, and then press  or the **End Call** soft key.

To end a call to a conference call participant, see [Managing Conferences](#) on page 4-16.

## Holding Calls When Your Phone is Connected to a Polycom HDX System

You cannot place video calls on hold. To place audio-only calls on hold, see [Holding and Resuming Calls](#) on page 3-8.

## Transferring Calls When Your Phone is Connected to a Polycom HDX System

You cannot transfer video calls. You can transfer audio-only calls only if there are no other video calls or conferences. To transfer audio-only calls, see [Transferring Calls](#) on page 3-17.

## Forwarding Calls When Your Phone is Connected to a Polycom HDX System

You cannot forward video calls. To forward audio-only calls, see [Forwarding Calls](#) on page 3-19.

## Enabling Do Not Disturb When Your Phone is Connected to a Polycom HDX System

To prevent audio-only calls from ringing on your phone, activate the Do Not Disturb feature.

Audio-only calls you receive while Do Not Disturb is enabled will display in your Missed Calls list. If you have chosen to forward audio-only calls to another number, those calls will be sent to that number if you enable the Do Not Disturb feature. (To enable Do Not Disturb, see [Enabling Do Not Disturb](#) on page 3-21.)

## Rejecting Calls When Your Phone is Connected to a Polycom HDX System


You can ignore incoming audio-only and video calls.


### To ignore incoming calls:


>> Press the **Reject** soft key.

## Hosting Conference Calls When Your Phone is Connected to a Polycom HDX System

You can create a conference with up to two other people that connect by audio only and a multiple number of sites that connect by video (the exact number of video calls you can add is determined by your system setup). At most, a conference call can have two audio-only calls and multiple video calls.

The following figure shows a video conference. The video icon, , displays when at least one conference participant connects by video.

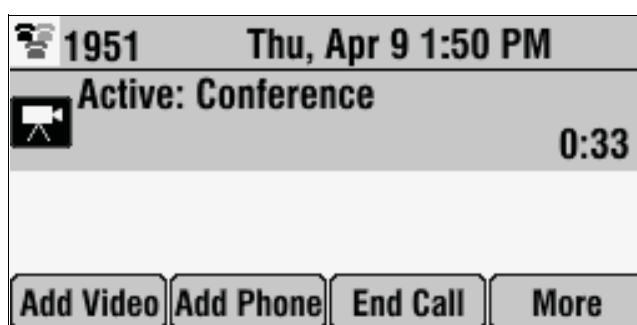

The following figure shows an audio-only conference. The handset icon, , displays when all conference call participants connect using audio-only endpoints.



### Setting Up Conferences

You can set up a conference in two ways:


- If you have no active calls, or you have an active call or conference, use the Add Phone or Add Video soft keys.
- If you have an audio-only call on hold and an active call, use the Join soft key.



**To set up a conference using the Add Phone or Add Video soft keys:**

1. Call the first person. See [Placing Calls When Your Phone is Connected to a Polycom HDX System](#) on page 4-8.

The following figure shows a video call to Jacklyn Smith.

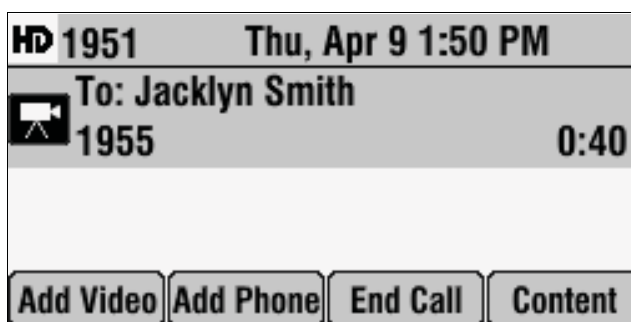

2. Place a call to the second person:
  - a To place a video call, press the **Add Video** soft key. To place an audio-only call, press the **Add Phone** soft key.
  - b Enter the number of the phone, and then press the **Dial** soft key. (For more information on placing calls, including how to enter IP addresses or URLs, see [Placing Calls When Your Phone is Connected to a Polycom HDX System](#) on page 4-8.)

The call is placed, and an active conference is automatically created.

To continue to add people to an established conference, do the following:

- To continue to add audio-only calls, press the **Add Phone** soft key from the Active:Conference screen, and then place the call to the person you want to add to the conference. When the person answers, the person automatically joins the conference.

The Add Phone soft key does not display when the maximum number of audio-only calls (two) has been added to the conference.

- To continue to add video calls, press the **Add Video** soft key from the Active:Conference screen, and then place a call to the site you want to add to the conference. When the site answers, the people automatically join the conference.

**Note**

If you have an active audio-only call, you can choose not to create a conference. You can place the active call on hold, and then place the call to the new person (see [Placing Calls When You Have an Audio-Only Call on Hold](#) on page 4-10).

A conference is automatically created when you have a video call and you answer an incoming call. See [Answering Calls When You Have an Active Call](#) on page 4-12.

### **To create a conference using the Join soft key:**

- >> If you have an active audio-only or video call or conference, and an audio-only call or conference on hold, scroll to either call, and then press the **Join** soft key.

An active conference is created.

### **Handling Active Conferences**

You handle active audio-only and video conferences differently.

You handle active audio-only conferences in the same way as you handle conferences for phones that are not connected to a Polycom HDX system (see [Hosting Conference Calls](#) on page 3-9). Except, an Add Video soft key displays so you can add additional video endpoints to the conference.

During a video conference:

- The Hold and Split soft keys are not available. You cannot place the conference on hold, or end the conference by pressing the Split soft key and placing all conference call participants on hold.
- The Add Phone and Add Video soft key display so you can add additional people to the conference. (The Add Phone soft key does not display if you have already added two audio-only calls to the conference.)
- The Content soft key displays. (See [Showing Content When Your Phone is Connected to a Polycom HDX System](#) on page 4-17.)

### **Managing Conferences**

The Manage soft key is available for both active audio-only and video conferences.

You manage audio-only and video conferences in the same way as you manage conferences for phones that are not connected to a Polycom HDX system. Except, for video conferences, the Hold and Far Mute soft keys are not available. For video conferences, you only have access to the Info, End Call, Content, and Back soft keys. For information on how to use these soft keys and manage conferences, see [Managing Conferences](#) on page 3-11.

## Controlling Volume and Muting Calls When Your Phone is Connected to a Polycom HDX System

When your phone is connected to a Polycom HDX system, all audio-only calls and conferences use your phone's speaker. Any video calls (or conference calls that connect to at least one video endpoint) use the Polycom HDX system's speaker. As well, your phone (and attached external microphone, if applicable) act as the microphone for all calls.

To adjust the volume of calls and to mute the near site, see [Adjusting the Speaker and Ringer Volume](#) on page 2-14 and [Muting the Microphone](#) on page 3-7.

### Note

When you press the Mute button on the phone, or on any extended microphone or Polycom HDX Microphone Array, you mute the microphone on the phone and all extended microphones and Polycom HDX Microphone Arrays connected to your phone and to the Polycom HDX system. A Mute icon displays on both the phone and Polycom HDX system screens. (You will not mute audio from other sources, such as a computer, VCR, or DVD player.)

You can also control the volume and mute microphones (including your phone's microphones) using the Polycom HDX system's remote control or keypad. For more information, see the user's guide for your Polycom HDX system at [www.polycom.com/vidocumentation](http://www.polycom.com/vidocumentation).

## Showing Content When Your Phone is Connected to a Polycom HDX System

A Content soft key displays on your phone so that you can show content to near-site participants, as well as to near-site and far-site video participants during a video call or conference. The Content soft key displays when your phone is idle, or when you have a call.

Depending on the Polycom HDX system you have, you may be able to show the following:

- Information stored on a computer.
- A paper document or object placed on a document camera.
- A videotape or DVD.

For information on how to connect a computer, document camera, VCR, or DVD player to a Polycom HDX system so you can show content, see your system administrator.

For detailed information on how to show content, see the user guide for your system at [www.polycom.com/vidocumentation](http://www.polycom.com/vidocumentation).

### To start and stop showing content:

>> Press the **Content** soft key.

## Handling Multiple Call Appearances When Your Phone is Connected to a Polycom HDX System

When your phone is connected to a Polycom HDX system, the following applies:

- You cannot place video calls (or conferences) on hold. Therefore, you cannot have multiple video call (or conference) appearances.
- Your phone can handle up to eight audio-only call appearances, or seven audio-only appearances (on hold) and one video call appearance.

For more information on multiple call appearances, see [Handling Multiple Call Appearances](#) on page 4-18.

## Handling Computer or Mobile Audio When Your Phone is Connected to a Polycom HDX System


When your phone is connected to a Polycom HDX system, your phone handles computer or mobile audio just like an audio-only call.

You handle computer or mobile audio when your phone is connected to a Polycom HDX system in the same way you handle computer or mobile audio when your phone operates as a standalone system (see [Using Computer or Mobile Audio with the Conference Phone](#) on page 4-1). Except, the video soft keys display instead.

## Handling Multiple Call Appearances

Your system administrator can set up your phone to have one or more call appearances. If your phone is set up to have multiple call appearances, your phone screen can display information for multiple calls, and you can handle active and held calls at the same time. Your phone can handle a maximum of eight different calls, or eight “appearances,” at one time.

The following figure shows what the phone screen looks like with multiple appearances set up. The figure shows an active call with extension 1955, and a call on hold with extension 1951.

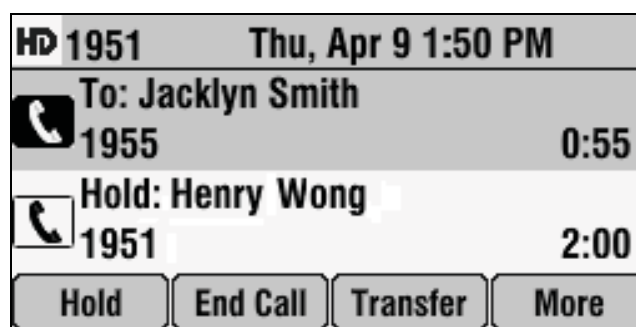

If three or more calls are taking place, the phone displays a counter at the top right of the screen. For example, in the following figure, “1/3” indicates that the call to John is the first one out of a total of three. To select the other two calls, press the **Up** or **Down** scroll keys.



## Using Buddy Lists

### Note

Monitoring the status (presence) of contacts in a buddy list is an optional feature that your system administrator enables. Your system may not support it. For more information, contact your system administrator.

A buddy list is a list of users/devices whose status, or “presence,” you can monitor. Users update their presence setting (for example, Be right back, Out to lunch, or Busy), and you can view their status in real time from your phone’s Buddy Status screen. If you like, you can block others from monitoring your status.

Your phone can “watch” the status of up to eight other phones. These phones form your “Buddy List.” Your phone can be monitored by up to eight other phones.

If your phone is configured to work with Microsoft Office Live Communications Server 2005, the behavior of presence settings and buddy lists is different. For more information, see [Integrating With Microsoft Office Live Communications Server 2005](#) on page 4-25, or contact your system administrator.

## Updating Presence Settings

Your presence setting indicates your status (either online, busy, be right back, away, on the phone, out to lunch, or offline). Update your presence setting so that other users can monitor your status from their phones.

### To change your presence setting:


1. Do one of the following:

- Press , and then select **Features > Presence > My Status**.


or

- Press the **MyStat** soft key.


The My Status screen displays.

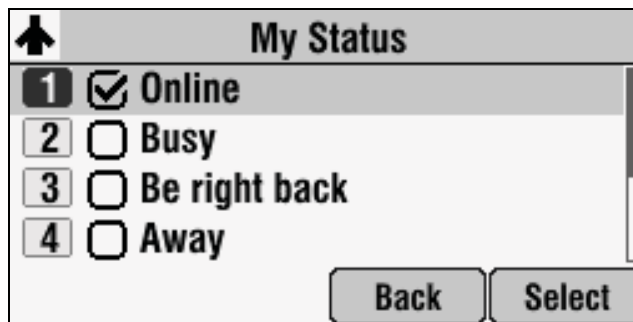

2. Scroll to the status you want, and then press **Select**.

3. Press  to return to the idle screen.

The following figure shows what the phone screen looks like when you assign a presence status (in this case, "Busy"). If you assign the status "Online" (the default status) or "On the phone," the presence status does not display on your screen.

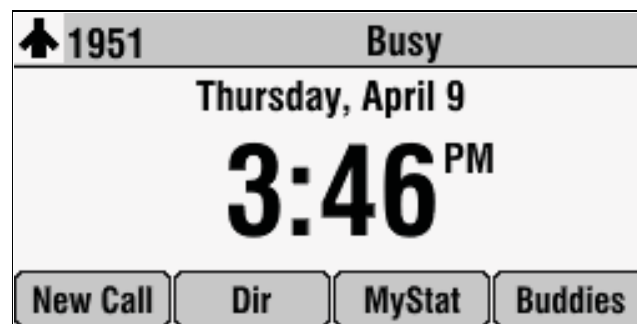

## Selecting Contacts to Monitor

Select the contacts whose presence you want to monitor by updating the contacts in your buddy list. You add contacts to your buddy list from your local Contact Directory.


### Note

If your call server is Microsoft Office Live Communications Server 2005, see [Integrating With Microsoft Office Live Communications Server 2005](#) on page 4-25.

### To update your buddy list:

1. Press the **Dir** soft key, and then select **Contact Directory**.

The Directory screen displays.

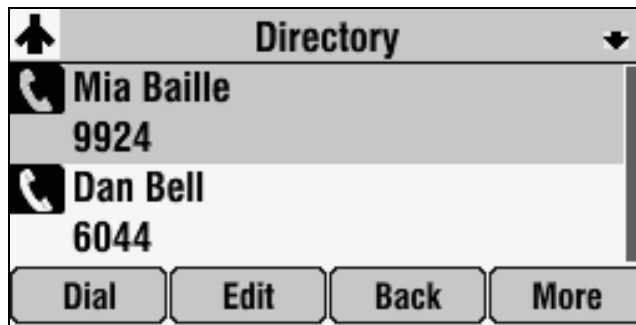


2. Scroll to find the contact. Or, search for the contact (see [Searching for Contacts in Your Local Contact Directory](#) on page 2-24).

You can use the \* key to Page Up and the # key to Page Down.

3. Press the **Edit** soft key.


The Edit Contact screen displays.

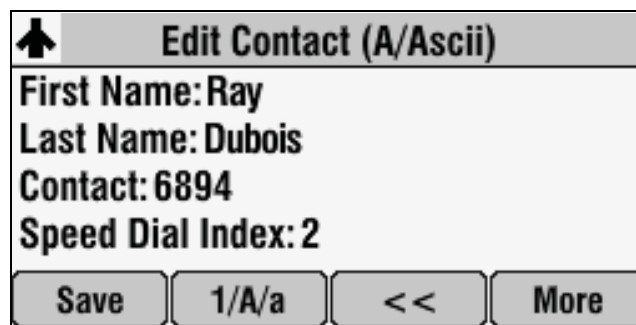

4. Scroll to **Watch Buddy**, and then press the **Right** or **Left** scroll key to choose **Enabled** or **Disabled**.

When Watch Buddy is enabled, the contact is added to your buddy list and you can monitor the contact's status. When Watch Buddy is disabled, the contact is removed from your buddy list and you cannot monitor the contact's status.

The default for Watch Buddy is Disabled.

5. Press the **Save** soft key.
6. Press  twice to return to the idle screen.

If you enable the Watch Buddy setting for a contact, the contact will display on your Buddy Status screen. To view your Buddy Status screen, press the **Buddies** soft key from the idle screen.

## Blocking Contacts From Viewing Your Status

Block a contact in your Contact Directory if you don't want the contact to view your status. If you unblock a contact, the contact can add you to their buddy list and view your status.

### Note


To view a list of contacts that can and cannot monitor your status, do the following:

- To view contacts that cannot view your status, press the **Menu** key, and then select **Features > Presence > Blocked List**.
- To view contacts that can view your status, press the **Menu** key, and then select **Features > Presence > Watcher List**.

### To block or unblock a contact from viewing your status:

1. Press the **Dir** soft key, and then select **Contact Directory**.

The Directory screen displays.

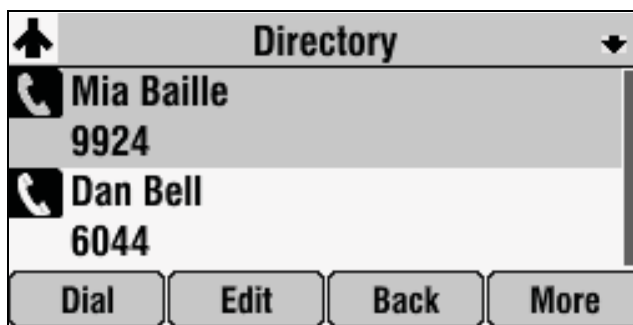


2. Scroll to find the contact. Or, search for the contact (see [Searching for Contacts in Your Local Contact Directory](#) on page 2-24).

You can use the \* key to Page Up and the # key to Page Down.



3. Press the **Edit** soft key.

The Edit Contact screen displays.

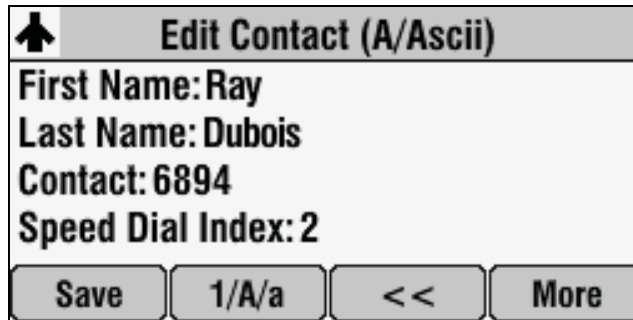


4. Scroll to **Block Buddy**, and then press the **Right** or **Left** scroll key to choose **Enabled** or **Disabled**.

When Block Buddy is enabled, the contact cannot watch your status. The contact will display in your Blocked List.

When Block Buddy is disabled, the contact can watch your status. The contact will display in your Watcher List.

The default for Block Buddy is Disabled.

5. Press the **Save** soft key.

6. Press  twice to return to the idle screen.


### Using your Blocked List to Unblock Contacts

You can use your Blocked List to unblock a contact, so the contact can view your status. Use the Blocked List to quickly unblock a contact, rather than updating the Contact Directory.


#### To use your Blocked List to unblock a contact:

1. Press , and then select **Features** > **Presence** > **Blocked List**.

The Blocked List screen displays.

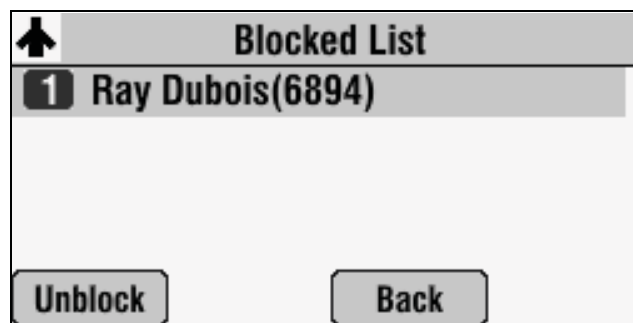

2. Scroll to the contact, and then press the **Unblock** soft key.

3. Press  to return to the idle screen.

The contact can now watch your phone. The contact will display in your Watcher List. (To view your Watcher List, see [Blocking Contacts From Viewing Your Status](#) on page 4-22.)

## Monitoring the Status of Contacts in Your Buddy List

You can monitor the status of all the contacts in your buddy list, except those contacts that have blocked you from viewing their status. To add contacts to your buddy list, see [Selecting Contacts to Monitor](#) on page 4-21.

### To monitor a contact in your buddy list:


>> Do one of the following:

- From the idle screen, press the **Buddies** soft key.

or

- Press , and then select **Features > Presence > Buddy Status**.

The Buddy Status screen displays, listing the status of all your buddies.

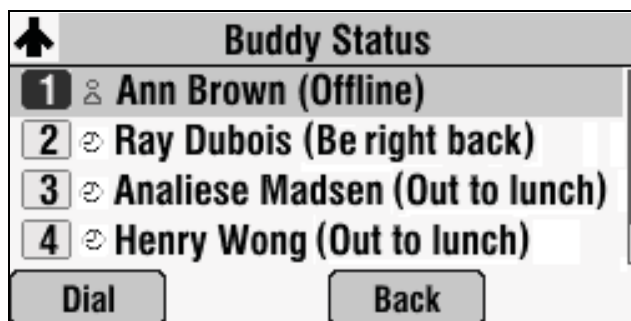



## Integrating With Microsoft Office Live Communications Server 2005

Your system administrator can configure your phone to work with Microsoft Office Live Communications Server 2005 and communicate with others using Microsoft Office Communicator and Windows Messenger. From your phone, you can invite, join, control, and monitor integrated multipoint conferences.


Any contacts added through your buddy list will appear as a contact in Microsoft Office Communicator and Windows Messenger. Any contacts added as a contact in Microsoft Office Communicator and Windows Messenger will appear in your buddy list. You can access your Privacy List on the phone to allow or disallow your contacts from monitoring your presence.

To view and change your presence, see [Updating Presence Settings](#) on page 4-20. For more information on integrating with Microsoft Office Live Communications Server 2005, contact your system administrator.

### To add a contact to your buddy list:

1. Press , and then select **Features > Presence > Buddy Status**.
2. Press the **Add** soft key.
3. Enter the phone number of the contact.
4. Press the **Submit** soft key.
5. Press  to return to the idle screen.

### To view and change your privacy list:

1. Press , and then select **Features > Presence > Buddy Status > Privacy List**.
2. Scroll to the contact.
3. Press the **Edit** soft key.
4. Scroll to **Access**, and then press the **Up** or **Down** scroll key to select **Enabled**.

When Access is enabled, you allow the contact to see your presence. When Access is disabled, you prevent the contact from seeing your presence.

The default for Access is Disabled.

5. Press  to return to the idle screen.

For more information, see the Microsoft Office Communicator and Windows Messenger documentation.

## Restarting the Phone

**Note**

If your phone malfunctions, you may be able to restore normal operation without restarting it. Before you restart your phone, contact your system administrator.

Periodically, you may need to restart your phone so your phone can accept a new configuration.


**Note**

Call lists are automatically cleared when you restart your phone.

**To restart the phone:**

1. Press , and then select **Settings > Basic > Restart Phone**.

The Restart Phone screen displays. The message “Are you sure?” displays.

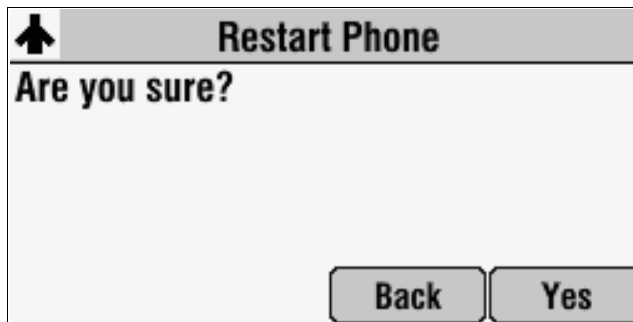

2. If you still want to restart the phone, press the **Yes** soft key.

The restart process begins. The process ends when the idle screen displays.

---

# Troubleshooting Your Phone


This chapter contains general troubleshooting information to help you solve any problems you might encounter when you use the SoundStation IP 7000 conference phone. The tables in this chapter list possible trouble symptoms, the likely causes of these problems, and recommended corrective actions to take. Problems are grouped as follows:

- [Power and Startup](#) on page 5-2
- [Controls](#) on page 5-3
- [Access to Screens and Systems](#) on page 5-4
- [Calling](#) on page 5-5
- [Displays](#) on page 5-6
- [Audio](#) on page 5-6
- [Productivity Suite](#) on page 5-7


To obtain more detailed troubleshooting information, you can access certain menus on your phone that test your phone hardware. For more information, see [Testing Phone Hardware](#) on page 5-7.

If you require more information or assistance, contact your system administrator.


## Power and Startup

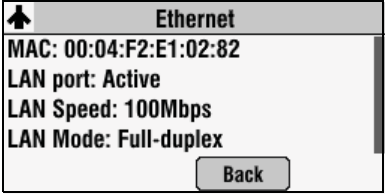Symptom	Problem	Corrective Action
<p>The display shows: "Network Link is Down"</p>	<p>The network cable is not properly connected.</p>	<p>Verify that the network cable is properly connected:</p> <ul style="list-style-type: none"> <li>• Check the cable termination at the switch or hub (furthest end of the cable from the phone).</li> <li>• Check that the switch or hub is operational (flashing link/status lights).</li> <li>• Press the <b>Menu</b> key, and then select <b>Status &gt; Network &gt; Ethernet</b>. From the Ethernet screen, scroll to <b>LAN port</b> and verify that it is Active.</li> </ul>  <ul style="list-style-type: none"> <li>• To attempt re-registration with the call server, reboot the phone. For more information, see your system administrator.</li> <li>• Contact your system administrator.</li> </ul>

## Controls

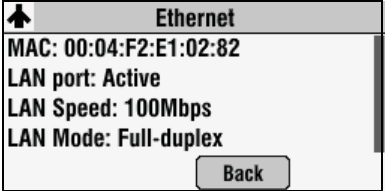


Symptom	Problem	Corrective Action
<p>The dial pad does not work.</p>	<p>The dial pad on the phone does not respond.</p>	<p>Try the following:</p> <ul style="list-style-type: none"> <li>• Check for a response from other feature keys.</li> <li>• Place a call to the phone from a known working telephone. Check for display updates.</li> <li>• Check if the LAN port is active or inactive. Press the <b>Menu</b> key, and then select <b>Status &gt; Network &gt; Ethernet</b>. From the Ethernet screen, scroll to <b>LAN port</b> and verify that it is Active.</li> </ul>  <ul style="list-style-type: none"> <li>• Check the termination at the switch or hub end of the network LAN cable. Ensure that the switch/hub port is operational (if not accessible, contact your system administrator).</li> <li>• Before restarting your phone, contact your system administrator. Your system administrator may want to troubleshoot the phone in more detail before restarting the phone and losing current status information.</li> </ul>
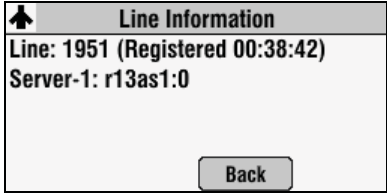
## Access to Screens and Systems

Symptom	Problem	Corrective Action
There is no response when you press a feature key.	The phone is not in an active state.	<p>Try the following:</p> <ul style="list-style-type: none"> <li>Press the keys more slowly.</li> <li>Call the phone to confirm that inbound call display and ringing is normal. If successful, try to press feature keys within the call to access the Directory or Buddy Status screens, for example.</li> <li>To confirm the line is actively registered to the call server, press the <b>Menu</b> key, and then select <b>Status &gt; Lines &gt; Line Information</b>. From the Line Information screen, verify that your phone line is registered.</li> </ul>  <ul style="list-style-type: none"> <li>To attempt re-registration with the call server, reboot the phone. For more information, see your system administrator.</li> </ul>
The display shows: "Network Link is Down"	The network cable is not properly connected.	See <a href="#">Power and Startup</a> on page 5-2.



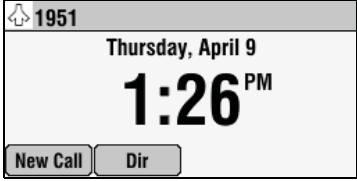

## Calling

Symptom	Problem	Corrective Action
There is no dial tone.	Power is not correctly applied to the phone.	<p>Verify that power is correctly applied to the phone:</p> <ul style="list-style-type: none"> <li>• Check that the display is illuminated.</li> <li>• Ensure the network cable is inserted properly on the underside of the phone. (Try unplugging and re-inserting the cable.)</li> </ul>
There is no audible ringing.	Ring setting or volume is low.	<p>Verify incoming ring setting and volume level:</p> <ul style="list-style-type: none"> <li>• To adjust the ringer volume, press either  or  when the phone is in the idle state.</li> <li>• Check that the ring type selected is not set to Silent Ring. (For more information, see <a href="#">Updating the Ring Tone</a> on page 2-8.)</li> </ul>
	Outbound or inbound calling is unsuccessful.	Place a call to the phone under investigation. Check that the display indicates incoming call information.
<p>A “hollow” phone icon displays at the top left of the screen.</p> 	The phone is not registered to a server.	Ask your system administrator to register the phone to a server.

## Displays

Symptom	Problem	Corrective Action
<p>There is no display.</p> <p>The display is incorrect.</p> <p>The display has bad contrast.</p>	<p>Power is not correctly applied to the phone.</p>	<p>Verify that power is correctly applied to the phone:</p> <ul style="list-style-type: none"> <li>• Check that the display is illuminated.</li> <li>• Ensure the network cable is inserted properly on the underside of the phone. (Try unplugging and re-inserting the cable.)</li> <li>• If your phone uses in-line power, have your system administrator check that the switch is supplying power to the phone.</li> </ul>
	<p>The contrast needs adjustment.</p>	<p>Adjust the screen contrast. (See <a href="#">Updating the Display Contrast</a> on page 2-5.)</p>
<p>The display is flickering.</p>	<p>Certain types of older fluorescent lighting cause the display to appear to flicker.</p>	<p>Try the following:</p> <ul style="list-style-type: none"> <li>• Move the phone away from the lights.</li> <li>• Replace the lights.</li> </ul>

## Audio

Symptom	Problem	Corrective Action
<p>The speaker has no audible sound.</p>	<p>Speaker volume is low.</p>	<p>Adjust the speaker volume. During a call, press either  or  .</p>


## Productivity Suite

Symptom	Problem	Corrective Action
<p>You are trying to access one of the following features, but it is not available on your phone:</p> <ul style="list-style-type: none"> <li>• Corporate Directory</li> <li>• Managing Conferences</li> </ul>	<p>The license is not installed on your phone or it has expired.</p>	<p>Do the following:</p> <ol style="list-style-type: none"> <li>1. Press the <b>Menu</b> key, and then select <b>Status &gt; Licenses</b>.</li> <li>2. Using the arrow keys, verify that the feature you want to use has a valid license.</li> </ol> <p>For more information, contact your system administrator.</p>

## Testing Phone Hardware

Your system administrator may ask you to access a diagnostics menu on your phone to test your phone hardware. From the diagnostics menu, you can test your phone's microphones, keypad mappings, and display. See your system administrator for instructions on how to perform these tests.

### To test your phone hardware:

>> Press , and then select **Status > Diagnostics > Test Hardware > Audio Diagnostics, Keypad Diagnostics, or Display Diagnostics**.



---

# Safety Notices

## Service Agreements

Please contact your Polycom Authorized Reseller for information about service agreements applicable to your product.

## Governing Law

This Limited Warranty and Limitation of Liability shall be governed by the laws of the State of California, U.S.A., and by the laws of the United States, excluding their conflicts of laws principles. The United Nations Convention on Contracts for the International Sale of Goods is hereby excluded in its entirety from application to this Limited Warranty and Limitation of Liability.

All rights reserved under International and Pan-American Copyright Conventions. No part of the contents of this manual may be copied, reproduced, or transmitted in any form or by any means, or translated into another language or format, in whole or part, without written consent from Polycom, Inc. Do not remove (or allow anybody else to remove) any product identification, copyright or other notices.

## Limitations of Liability

LIMITATION OF LIABILITY. TO THE FULL EXTENT ALLOWED BY LAW, POLYCOM EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF POLYCOM OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT POLYCOM'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

#### **Polycom Limited Warranty and Limitation Liability**

LIMITED WARRANTY. Polycom warrants to the end user (“Customer”) that this product is expected to be free from defects in workmanship and materials, under normal use and service, for one year from the date of purchase from Polycom or its authorized reseller.

Polycom’s sole obligation under this express warranty is at Polycom’s option and expense, to repair the defective product or part, deliver to Customer an equivalent product or part to replace the defective item, or if neither of the two foregoing options are reasonably available, Polycom may, on its sole discretion, refund to Customer the purchase price paid for the defective product. All products that are replaced will become the property of Polycom. Replacement products or parts may be new or reconditioned.

Polycom is expected to warrant any replaced or repaired product or part for ninety (90) days from shipment, or the remainder of the initial warranty period, whichever is longer. Products returned to Polycom must be sent prepaid and packaged appropriately for safe shipment, and it is recommended that they be insured or sent by a method that provides for tracking of the package. Responsibility for loss or damage does not transfer to Polycom until the returned item is received by Polycom. The repaired or replaced item will be shipped to Customer, at Polycom’s expense, not later than thirty (30) days after Polycom receives the defective product, and Polycom will retain risk of loss or damage until the item is delivered to Customer.

#### **Exclusions**

Polycom will not be liable under this limited warranty if its testing and examination disclose that the alleged defect or malfunction in the product does not exist or results from:

- Failure to follow Polycom’s installation, operation, or maintenance instructions.
- Unauthorized product modification or alteration.
- Unauthorized use of common carrier communication services accessed through the product.
- Abuse, misuse, negligent acts or omissions of Customer and persons under Customer’s control; or
- Acts of third parties, acts of God, accident, fire, lightening, power surges or outages, or other hazards.

#### **Warranty Exclusive**

IF A POLYCOM PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER’S SOLE REMEDY FOR BREACH OF THAT WARRANTY SHALL BE REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT POLYCOM’S OPTION. TO THE FULL EXTENT ALLOWED BY LAW, THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, TERMS, OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES, TERMS, OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, SATISFACTORY QUALITY, CORRESPONDENCE WITH DESCRIPTION, AND NON-INFRINGEMENT, ALL OF WHICH ARE EXPRESSLY DISCLAIMED. POLYCOM NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS.

**Safety and Compliance****Part 15 FCC Rules**

This device is compliant with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interferences received, including interference that may cause undesired operation.

**Class A Digital Device or Peripheral**

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**Modifications**

In accordance with Part 15 of the FCC Rules, the user is cautioned that any changes or modifications not expressly approved by Polycom, Inc. could void the user's authority to operate the equipment. This equipment may not be used on a coin service or party line.

**Installation Instructions**

Installation must be performed in accordance with all relevant national wiring rules.

L'Installation doit être exécutée conformément à tous les règlements nationaux applicable au filage électrique.

When using Power over Ethernet (PoE), the equipment is to be connected only to PoE networks without connections to the outside plant.

**Plugs Acts as Disconnect Device**

The socket outlet to which this apparatus is connected must be installed near the equipment and must always be readily accessible.

La prise électrique à laquelle l'appareil est branché doit être installée près de l'équipement et doit toujours être facilement accessible.

**Industry Canada (IC)**

This Class [A] digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe [A] est conforme à la norme NMB-003 du Canada.

**CE and VCCI Mark**

This SoundStation IP 7000 phone is marked with the CE mark. This mark indicates compliance with EC Directives 2006/95/ED and 2004/108/EC. A full copy of the Declaration of Conformity can be obtained from Polycom Ltd., 270 Bath Road, Slough, Berkshire, SL1 4DX, UK.

この装置は、クラスA 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 VCCI- A

**Safety and Compliance (continued)**

사용자 안내문

A 급기기(업무용 정보통신기기)

이 기기는 업무용으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이 점을 주의하시기 바라며 만약 잘못 판매 또는 구입하였을 때에는 가정용으로 교환하시기 바랍니다.

**WARNING Electrical Safety**

To avoid electric shock, do not connect safety extra low voltage (SELV) circuits to teleconference station network (TNV) circuits. LAN ports contain SELV circuit, and WAN ports contain TNV circuits. Some LAN and WAN ports both use RJ-45 connectors. Use caution when connecting cables.

This product is rated 48Vdc, 0.375A. When used with the optional external power supply, the power supply shall be a Listed power supply with a LPS output, rated 48V, min. 0.375A.

**Russian Compliance**

Ministry of Information Technologies & Communication of the Russian Federation - Declaration of Conformity DoC # CПД-1918. Expiry 03/28/2011.



---

# Index

## Symbols

- # key, page down shortcut 1-7
- \* key, page up shortcut 1-7

## Numerics

- 2.5mm audio connector 2-12

## A

- answering calls 3-6, 4-11
- appearances, handling 4-18
- attended transfer 3-17
- audio components 2-12
- audio connectors 2-12
- Auto Divert setting 2-22
- Auto Reject setting 2-22
- auxiliary audio components 2-12, 4-1

## B

- backlight intensity 2-6
- bass and treble control 2-11
- blind transfer 3-17
- Block Buddy setting 2-22, 4-23
- blocked list 4-22
- blocking and unblocking contacts 4-22
- buddies, managing 4-19
- buddy lists, using 4-19

## C

- call
  - appearances, handling 4-18
  - forwarding 3-19, 4-13
  - lists, using 2-14

## calls

- answering 3-6, 4-11
  - with auxiliary audio 4-1
  - and call lists 2-14, 4-11
  - and conference calls 4-14, 3-9
  - distinguishing by ring type 2-10, 2-29
  - diverting 2-31
  - ending 3-6
  - forwarding 3-19, 4-13
  - handling with Polycom HDX system 4-7
  - holding and resuming 3-8, 3-13, 3-15
  - holding, and video calls 4-13
  - ignoring 3-6
  - obtaining information about 2-17
  - on-hook and off-hook 3-2
  - placing 3-2
  - rejecting 2-30
  - transferring 2-31, 3-17, 4-13
- cell phone, using with video endpoint 4-18
- cell phones, using with conference phone 4-1
- characters, entering 1-8
- computer
  - calling applications 4-1
  - calling applications,
    - and Polycom HDX system 4-18
  - content, showing 4-17
- conference calls, hosting 3-9, 4-5, 4-14
- Confrnc key, about 1-5
- consultative transfer 3-17
- contact directory
  - accessing 2-18
  - managing 2-17
  - and Polycom HDX system 4-11
  - searching for contacts in 2-24

## contacts

- adding to contact directory 2-20
- blocking and unblocking 4-22
- calling 2-29
- deleting 2-28
- managing 2-17
- monitoring 4-21
- searching for 2-24
- setting ring tones for 2-9
- updating 2-27
- viewing in contact directory 2-18
- viewing in corporate directory 2-18

## Content soft key 4-17

## content, showing 4-17

## contrast, adjusting for screen 2-5

## corporate directory

- accessing 2-18
- managing 2-17
- and Polycom HDX system 4-11
- saving search results for 2-19
- searching for contacts in 2-24
- and View Persistency setting 2-19

## D

### data, entering 1-7

### date and time display, updating 2-2

### Diagnostics menu 5-7

### dial pad keys, about 1-5

### directory contacts, managing 2-17

### display contrast, updating 2-5

### distinguishing calls 2-29

### diverting calls 2-22, 2-31

### Do Not Disturb feature 3-21, 4-13

## E

### Encoding soft key 1-8

### end call key, about 1-4

### ending calls 3-6

### ending conference calls 3-16

### EQ settings 2-11

## F

### Far Mute soft key 3-12

### fields, enabling or disabling 1-9

### forwarding calls 3-19, 4-13

## H

### hardware, testing 5-7

### HD Voice technology, about 1-5

### HDX

- system, using with phone 4-7

### holding

- calls 3-8, 4-13
- conference call participants 3-13, 4-16
- conference call participants,  
from video endpoints 4-16
- conferences 3-15
- conferences, from video endpoints 4-16

## I

### icons, description of 1-5

### ignoring calls 3-6

### inactivity timer 1-7

### Info soft key 3-12, 3-15

## J

### Join soft key, using 3-11, 4-5

## K

### key buttons, description of 1-3

## L

### language, updating for phone 2-2

### lapel microphones 2-12

### LED indicators 1-2

### licenses, status of 5-7

### lowercase characters, entering 1-8

## M

### make call key, about 1-5

### maximum intensity 2-6

### menu key, about 1-5

### menus, navigating 1-7

### microphones, internal 1-2

### microphones, muting 3-7, 4-17

### Microsoft Office Live Communications

- Server 2005 4-19, 4-21, 4-25

### missed calls list 2-14

### mobile audio, using with video endpoint 4-18

### mobile phones, using with conference phone 4-1

### multiple call appearances, handling 4-18

### Mute key 1-5, 4-17

### muting the microphone 3-7, 4-6

### MyStat soft key 4-20

**N**

numbers, entering 1-8

**O**

off-hook calls 3-2

on-hook calls 3-2

**P**

placed calls list 2-14

placing calls 3-2, 4-8

Polycom HD Voice technology, about 1-5

Polycom HDX system, using with phone 4-7

power issues, troubleshooting 5-2

presence settings 4-20

productivity suite 5-7

**R**

received calls list 2-14

recording devices 2-12

redial key, about 1-5

redialing numbers 3-7

Reject soft key 2-30, 3-6

rejecting calls 2-30, 3-6, 4-13

restarting the phone 4-26

ring tone, updating for contacts 2-8

ringer volume, adjusting 2-14

**S**

scroll keys, about 1-4, 1-7

searching for contacts 2-24

select key, about 1-4

shared lines 2-32

showing content 4-17

Silence feature 3-6

soft keys, about 1-4

soft keys, viewing hidden 1-9

spaces, entering 1-8

speaker volume, adjusting 2-14, 4-6

speaker, internal 1-2

speakers, external 2-11, 2-12

special characters, entering 1-8

speed dialing 3-5, 3-22, 4-11

startup issues, troubleshooting 5-2

status, updating 4-20

symbols, entering 1-8

**T**

testing phone hardware 5-7

text, entering and deleting 1-8, 1-9

time and date display, updating 2-2

transferring calls 2-31, 3-17, 4-13

treble and bass control, updating 2-11

troubleshooting

audio problems 5-6

calling problems 5-5

control problems 5-3

and the Diagnostics menu 5-7

display problems 5-6

feature availability 5-7

hardware 5-7

licenses 5-7

power and startup problems 5-2

productivity suite 5-7

screen and system problems 5-4

**U**

uppercase characters, entering 1-8

URLs, dialing 3-4

**V**

View Persistency setting 2-19

voice mail 2-30, 3-24

volume keys, about 1-4

volume, adjusting 2-14, 4-6, 4-17

**W**

Watch Buddy setting 2-22, 4-22

watcher list 4-22

wireless microphones 2-12



# End-User License Agreement for Polycom<sup>®</sup> Software

This End-User License Agreement (“Agreement”) is a legal agreement between you (either an individual or a single entity) and Polycom, B.V for the Polycom Software Product licensed by Polycom B.V in Europe, the Middle East, Africa, and Asia Pacific or Polycom, Inc., for the Polycom Software Product licensed by Polycom, Inc. in the rest of the world (collectively, “Polycom”). The Software Product includes the computer software included herewith and may include associated media, printed materials and online or electronic documentation (“Software Product”). By clicking ‘I agree’ or by installing, copying, or otherwise using the Software Product, you agree to be bound by the terms of this Agreement. If you do not agree to the terms of this Agreement, do not install or use the Software Product, and return it to your place of purchase for a full refund.

The Software Product is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties. The Software Product is licensed (not sold) to you, and its use is subject to the terms of this Agreement.

## 1. GRANT OF LICENSE.

Subject to the terms of this Agreement, Polycom grants to you a nonexclusive license to install and use the Software Product included with the Polycom product that incorporates or uses the Software Product (the “Product”). You may use the Software Product only in connection with the use of the Product. You are not permitted to lease, rent, distribute or sublicense the Software Product or to use the Software Product in a time-sharing arrangement or in any other unauthorized manner. Further, no license is granted to you in the human readable code of the Software Product (source code). Except as provided below, this License Agreement does not grant you any rights to patents, copyrights, trade secrets, trademarks, or any other rights in respect to the Software Product.

## 2. DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS.

**2.1 Limitations on Reverse Engineering, Decompilation, and Disassembly.** You may not reverse engineer, decompile, or disassemble the Software Product, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation. The Software Product is licensed as a single product. Its component parts may not be separated for use on more than one Product.

**2.2 Backup.** Except as expressly provided for under this Agreement, you may not copy the Software Product, except, however, you may keep one copy of the Software Product and, if applicable, one copy of any previous version for back-up purposes, only to be used in the event of failure of the original. All copies of the Software Product must be marked with the proprietary notices provided on the original Software Product. You may not reproduce the supporting documentation accompanying the Software Product.

**2.3 Modifications.** You may not modify, translate, or create derivative works of the Software Product.

**2.4 Proprietary Notices.** You may not remove or obscure any proprietary notices on or in the Software Product or the supporting documentation.

**2.5 Software Transfer.** You may permanently transfer all of your rights under this Agreement provided you retain no copies, you transfer all of the Software Product (including all component parts, the media, any printed materials, any upgrades, this Agreement, and, if applicable, the Certificate of Authenticity), and any recipient agrees to the terms of this Agreement. If the Software Product is an upgrade, any transfer must include all prior versions of the Software Product. However, if the Software Product is marked “Not for Resale” or “NFR,” you may not resell it or otherwise transfer it for value.

**2.6 Copyright.** All title and copyrights in and to the Software Product (including, but not limited to, any images, photographs, animations, video, audio, music, text, and “applets” incorporated into the Software Product), the accompanying printed materials, and any copies of the Software Product are owned by Polycom or its suppliers. The Software Product is protected by copyright laws and international treaty provisions. Title, ownership rights, and intellectual property rights in the Software Product shall remain in Polycom or its suppliers. Title and related rights in the content accessed through the Software Product is the property of such content owner and may be protected by applicable law. This Agreement gives you no rights in such content.

**2.7 Confidentiality.** The Software Product contains valuable proprietary information and trade secrets of Polycom and its suppliers and you shall protect the confidentiality of, and avoid disclosure and unauthorized use of, the Software Product.

**2.8 Dual-Media Software.** You may receive the Software Product in more than one medium. Regardless of the type or size of medium you receive, you may use only one medium that is appropriate for your single Product. You may not use or install the other medium on another Product.

**2.9 Reservation.** Polycom reserves all rights in the Software Product not expressly granted to you in this Agreement.

### **3. SUPPORT SERVICES.**

Polycom may provide you with support services related to the Software Product (“Support Services”). Use of Support Services is governed by the Polycom policies and programs described in the Polycom-provided materials. Any supplemental software code provided to you as part of the Support Services is considered part of the Software Product and is subject to the terms and conditions of this Agreement. With respect to technical information you provide to Polycom as part of the Support Services, Polycom may use such information for its business purposes, including for product support and development. Polycom will not utilize such technical information in a form that personally identifies you.

### **4. TERMINATION.**

Without prejudice to any other rights, Polycom may terminate this Agreement if you fail to comply with any of the terms and conditions of this Agreement. In such event, you must destroy all copies of the Software Product and all of its component parts. You may terminate this Agreement at any time by destroying the Software Product and all of its component parts.

### **5. UPGRADES.**

If the Software Product is labeled as an upgrade, you must be properly licensed to use the software identified by Polycom as being eligible for the upgrade in order to use the Software Product. A Software Product labeled as an upgrade replaces and/or supplements the software that formed the basis for your eligibility for the upgrade. You may use the resulting upgraded Software Product only in accordance with the terms of this Agreement. If the Software Product is an upgrade of a component of package of software programs that you licensed as a single product, the Software Product may be used and transferred only as part of that single Software Product package and may not be separated for use on more than one Product.

### **6. WARRANTY AND WARRANTY EXCLUSIONS.**

**6.1 Limited Warranty.** Polycom warrants that (a) the Software Product will perform substantially in accordance with the accompanying documentation for a period of ninety (90) from the date of receipt by you, and (b) any Support Services provided by Polycom shall be substantially as described in applicable written materials provided to you by Polycom, and Polycom support engineers will make commercially reasonable efforts to solve any problem issues. Polycom does not warrant that your use of the Software Product will be uninterrupted or error free, or that all defects in the Software Product will be corrected. Polycom’s sole obligation under this express warranty shall be, at Polycom’s option and expense, to

refund the purchase price paid by you for any defective software product which is returned to Polycom with a copy of your receipt, or to replace any defective media with software which substantially conforms to applicable Polycom published specifications. Any replacement Software Product will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer.

**6.2 Warranties Exclusive.** If this Software Product does not operate as warranted above, your sole remedy for breach of that warranty shall be repair, replacement, or refund of the purchase price paid, at Polycom's option. TO THE FULL EXTENT ALLOWED BY LAW, THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, TERMS OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES, TERMS OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, SATISFACTORY QUALITY, CORRESPONDENCE WITH DESCRIPTION, AND NON-INFRINGEMENT, ALL OF WHICH ARE EXPRESSLY DISCLAIMED. POLYCOM NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, OR USE OF THIS SOFTWARE PRODUCT.

POLYCOM SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT OR MALFUNCTION IN THE SOFTWARE PRODUCT DOES NOT EXIST OR WAS CAUSED BY YOUR OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO MODIFY THE PRODUCT, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, POWER CUTS OR OUTAGES, OTHER HAZARDS, OR ACTS OF GOD.

## **7. LIMITATION OF LIABILITY.**

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL POLYCOM OR ITS SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OR INABILITY TO USE THE SOFTWARE PRODUCT OR THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, EVEN IF POLYCOM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN ANY CASE, POLYCOM'S ENTIRE LIABILITY SHALL BE LIMITED TO THE GREATER OF THE AMOUNT ACTUALLY PAID BY YOU FOR THE SOFTWARE PRODUCT OR U.S. \$5.00; PROVIDED, HOWEVER, IF YOU HAVE ENTERED INTO A POLYCOM SUPPORT SERVICES AGREEMENT, POLYCOM'S ENTIRE LIABILITY REGARDING SUPPORT SERVICES SHALL BE GOVERNED BY THE TERMS OF THAT AGREEMENT.

## **8. DISCLAIMER.**

Some countries, states, or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages for certain products supplied to consumers, or the limitation of liability for personal injury, so the above limitations and exclusions may be limited in their application to you. When the implied warranties are not allowed to be excluded in their entirety, they will be limited to the duration of the applicable written warranty. This warranty gives you specific legal rights which may vary depending on local law.

## **9. EXPORT CONTROLS.**

The Software Product may not be downloaded or otherwise exported or re-exported (i) into (or to a national or resident of) Cuba, North Korea, Iran, Syria, Sudan, or any other country to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's List of Specially Designated Nationals or the U.S. Commerce Department's Table of Denial Orders. By downloading or using this Software Product, you are agreeing to the foregoing and you are representing and warranting that you are

not located in, under the control of, or a national or resident of any such country or on any such list. If you obtained this Software Product outside of the United States, you are also agreeing that you will not export or re-export it in violation of the laws of the country in which it was obtained.

## **10. MISCELLANEOUS.**

**10.1 Governing Law.** This Agreement shall be governed by the laws of the State of California, as such laws are applied to agreements entered into and to be performed entirely within California between California residents, and by the laws of the United States. The United Nations Convention on Contracts for the International Sale of Goods (1980) is hereby excluded in its entirety from application to this Agreement.

**10.2 General.** This Agreement represents the complete agreement concerning this license and may amended only by a writing executed by both parties. If any provision of this Agreement is held to be unenforceable, such provision shall be reformed only to the extent necessary to make it enforceable.

**10.3 Contact.** If you have any questions concerning this Agreement, or if you desire to contact Polycom for any reason, please contact the Polycom office serving your country.

**10.4 U.S. Government Restricted Rights.** The software and documentation provided by Polycom pursuant to this Agreement are "Commercial Items," as the term is defined at 48 C.F.R. §2.101, consisting of "Commercial Computer Software" and "Commercial Computer Software Documentation," as such terms are used in 48 C.F.R. §12.212 or 48 C.F.R. §227.7202, as applicable. Consistent with 48 C.F.R. §12.212 or 48 C.F.R. §§227.7202-1 through 227.7202-4, as applicable, the Commercial Computer Software and Commercial Computer Software Documentation are licensed to United States Government end users (1) only as Commercial Items and (2) with only those rights as are granted to all other users pursuant to the terms of this Agreement.

[www.polycom.com](http://www.polycom.com)

**Corporate Headquarters:** 4750 Willow Road, Pleasanton, CA 94588,  
USA  
Phone: 925.924.6000

**Israel Office:** 94 Derech Em Hamoshavot P.O.B. 3654,  
Petach-Tikva 49130, Israel  
Phone: +972 3 925 1444  
Fax: +972 3 921 1571

**Netherlands Office:** Tarnspolis Park, Siriusdreef 41, 2132 Wt  
Hoofddorp Netherlands  
Phone: 31-0-230-2600